

BETTER BASICS FAUX WOOD BLINDS INSTALLATION INSTRUCTIONS

SIMPLY FOLLOW OUR STEP-BY-STEP INSTRUCTIONS AND YOUR BEAUTIFUL NEW BLINDS WILL SOON BE ENHANCING YOUR HOME OR WORKSPACE FOR MANY YEARS TO COME.

Getting Started:

Carefully unpack your blinds and check to make sure you have the following installation parts. We recommend reading through these instructions before starting the installation.

 
Parts Included:

- Screws
- Two mounting brackets
- A wand (if selected)
- Valance
- Cord cleat


Tools You Will Need:

- Drill with a 1/8" bit
- A Phillips bit
- Flathead screwdriver
- Metal tape measure


Please note that your brackets must be securely attached to the mounting surface. If your screws do not hit wood studs you'll have to use a different fastener which can be found at any local hardware store.

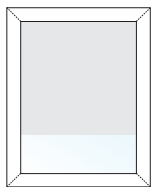

INSIDE MOUNT

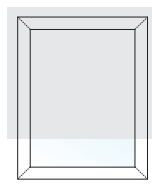 


OUTSIDE MOUNT

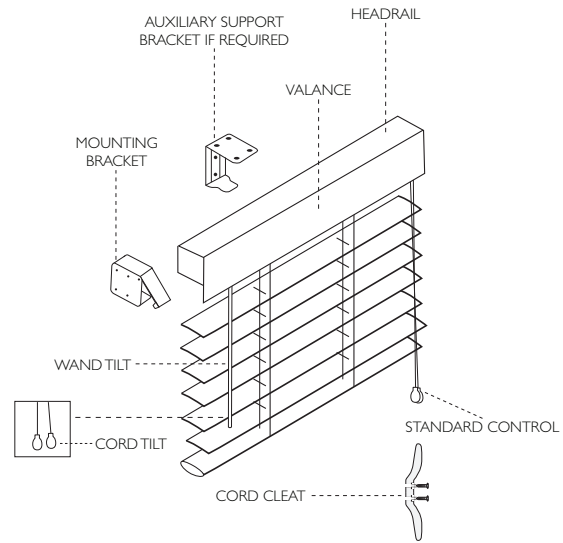 

* According to the Window Covering Manufacturers Association Inc., all labels must not be removed from the product.

1. Installation Instructions:

 
Unwrap the blind. Do not untie cord at this time. Hold the blind against the window to determine the proper placement. It will either fit inside the window casing (inside mount) or outside on the window casing or wall (outside mount). This will determine where and how your installation brackets should be attached.

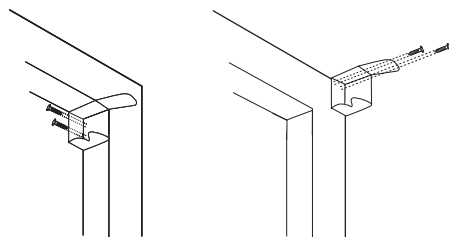

INSIDE MOUNT


OUTSIDE MOUNT

 Inside Mount: Make certain the headrail is level and clear of obstructions. Make pencil marks 1/8" below the headrail on each end. The bottom of the installation brackets will be placed on these marks.

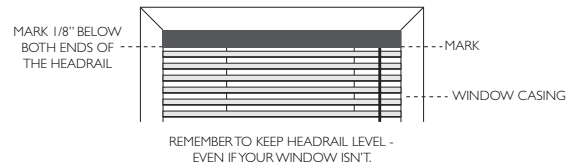

REMEMBER TO KEEP HEADRAIL LEVEL - EVEN IF YOUR WINDOW ISN'T.

 Outside Mount: Hold the blind level and center against the window casing or wall. Mark the casing/wall with a pencil just below the headrail on each end. Also mark the window casing/wall 1/8" beyond the ends of the headrail. The installation brackets will be placed on these marks.

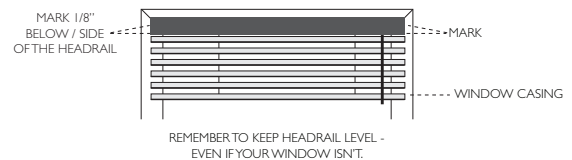


REMEMBER TO KEEP HEADRAIL LEVEL - EVEN IF YOUR WINDOW ISN'T.

2. Mounting Installation Brackets:

The brackets may be mounted using two screws in several different orientations depending on your needs:

- Inside the jambs (inside mount)
- To the outside of the window casing or wall (outside mount)
- Overhead: Either to the top inside of the window frame (inside mount) or to the ceiling (outside mount).

 Open the bracket's swivel cover with a screwdriver. Hold the bracket against the mounting surface and align it with the pencil marks. Using a pencil, mark the location of the two diagonal holes for the mounting screws at least 1/4" from the edge of the wood. If auxiliary support brackets have been supplied go to step 2A.

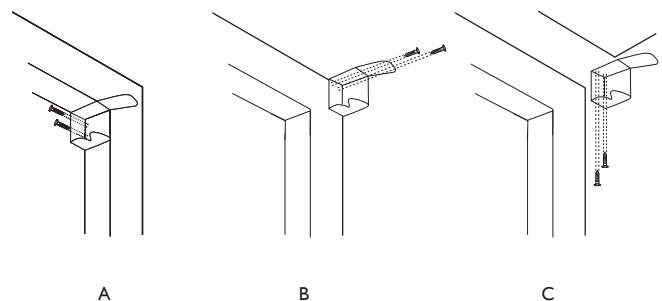

A

B

 
C

BETTER BASICS WOOD BLINDS INSTALLATION INSTRUCTIONS (continued)

SIMPLY FOLLOW OUR STEP-BY-STEP INSTRUCTIONS AND YOUR BEAUTIFUL NEW BLINDS WILL SOON BE ENHANCING YOUR HOME OR WORKSPACE FOR MANY YEARS TO COME.

2A. Auxiliary Support Brackets (Optional):



If an auxiliary support bracket is included with your blind it should be placed in line with the installation brackets. The auxiliary support should not be in line vertically with the blind's cord or ladder as it may interfere with the blind's lifting and tilting mechanism.



Headrail Installation:

With brackets installed insert the headrail into the mounting brackets.

  * If your blind is not fitting snugly left to right, open the mounting brackets, remove the headrail and pry out the tab at the end of the headrail with a screwdriver.

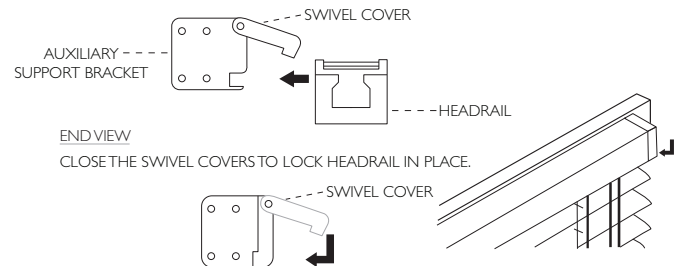


Valance Installation:

Magnets come screwed into the valance; simply stick the magnetic valance to the headrail. If your blind was ordered as an outside mount, the valance is supplied with pre-mounted returns. No returns are included with an inside mount.

Wand Attachment (If Applicable):


Attach the wand to hook and slide sleeve down to trap wand in place. You will now be able to adjust the angle of the slats by turning the wand.

 CAUTION: Do not continue to turn the wand after it starts to bind as this may damage the tilt mechanism.

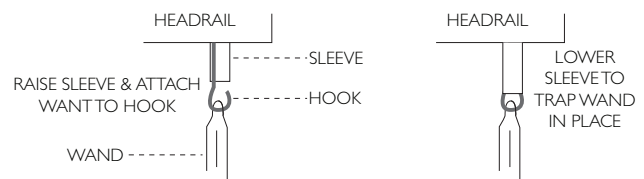


Cord Lock Operation (If Applicable):

 To raise the shade, pull the cord downward in a vertical position. To lower or release the shade, pull the cord down and toward the center of the shade. Return the cord to the vertical position to lock.

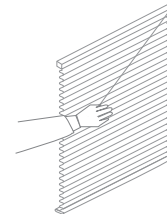

Attaching the Cord Cleat (If Applicable):

 To protect small children, you should install the cord cleat to keep the control cords out of harm's way. Simply mount the cord cleat to the wall or window frame next to the shade with the screws provided. Mount the cord cleat at a safe height, taking into account furniture or other objects upon which a child may climb. Then, after each use of the shade, simply wrap the excess cord around the cleat. It's fast, easy and safe.



Care and Cleaning:

If the blind is dusty, simply vacuum over it using an upholstery attachment. For cleaning soiled spots, we recommend contacting the Help Desk.

Warranty:

The Shade Store products are covered by a limited lifetime warranty. This warranty covers any defects in materials or workmanship so long as the product is measured and installed according to instructions. Every Shade Store window treatment is designed to provide trouble-free use. In the unlikely event that warranty service is ever needed, simply contact the Help Desk at help@theshadestore.com or 800-754-1455 for assistance.