THE SHADE STORE MOTORIZATION

Remote Programming Guide


BY: THE SHADE STORE


Table of Contents

Each battery & plug-in motor from The Shade Store will come preprogramed from the factory. The preprograming assures the remote is paired with the motor, the upper and lower operation limits are set, the remote is locked and the unnecessary channels are hidden for ease of use (15 available).

- 1. Remote Overview
- 2. Initial Setup Programming
- 3. Sleep Mode
- 4. Remote & Motor Pairing
- 5. Reverse Motor Direction
- 6. Mirroring Remotes
- 7. Adjusting Limits
- 8. Tilt Mode
- 9. Hiding/Un-hiding Remote Channels
- 10. Favorite Positions
- 11. Group Control
- 12. Reset to Factory Settings
- 13. Adjusting Motor Speed
- 14. Troubleshooting

Remote Overview

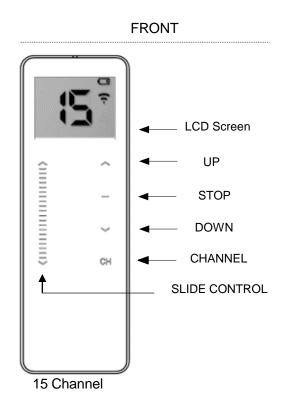

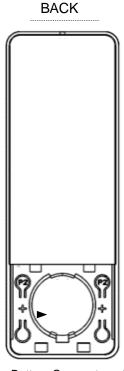

Battery Compartment (Shown with cover removed)

TECHNICAL SPECIFICATIONS		
Voltage:	3V (CR2450)	
Frequency:	433.92 MHz	
Transmitting Power:	10 milliwatt	
Ambient Operating Temperature:	-10°C - 50°C	
Transmission Distance:	Up to 200 meters (open space)	
Battery:	CR2450	


FEATURES

- Touch sensitive controls
- Levelling control (15 Channel Remote)
- LCD Display (15 channel Remote)
- Hide unused channels function
- Slim magnetic wall mount holder


PACKAGE CONTENTS

- Remote
- Magnetic holder & fixing screws
- Instruction Manual
- 3V CR2450 Battery


INSTALL WALL MOUNT HOLDER

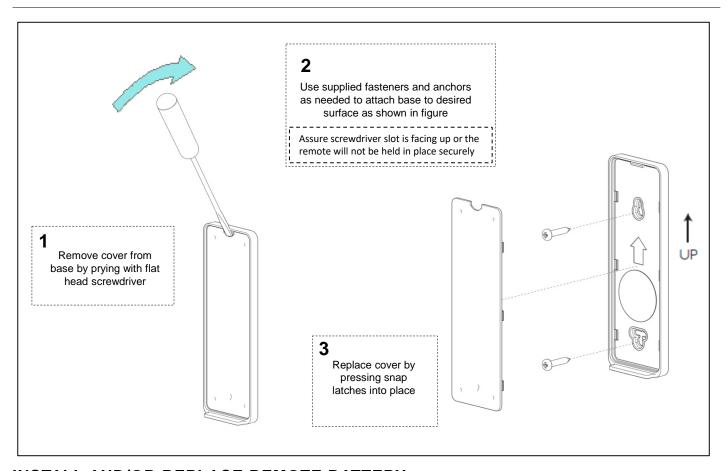


INSTALL AND/OR REPLACE REMOTE BATTERY

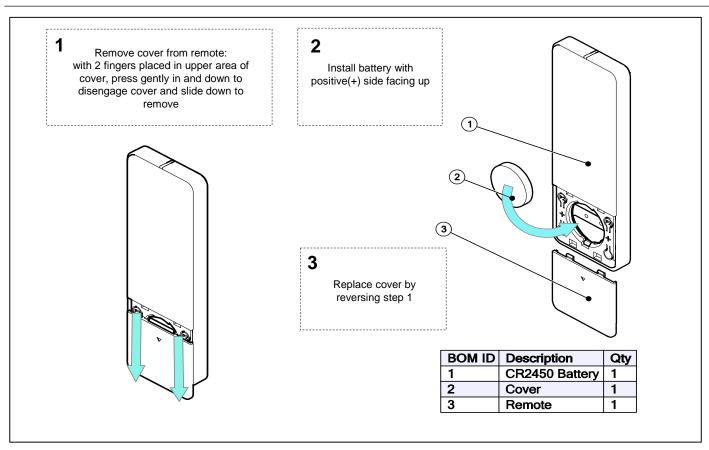

1. SELECT CHANNEL TO BE PAIRED

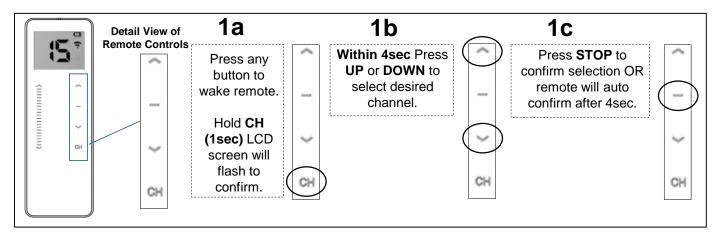


2. PAIRING REMOTE TO MOTOR

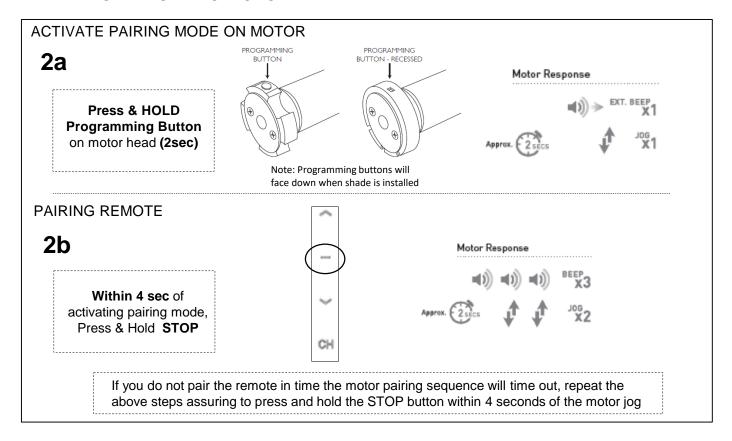

3. Unlock/Lock Remote (Limit Setting Mode)

If limits need adjusting, follow the instructions below to unlock the remote for limit setting:


- Unlock the limit setting tool by pressing the right P2 button on the back of the remote (remove cover to expose the button)
- Press and hold the button until the LED display shows a flashing "U", then release.
- You will be required to set the remote back into "limit locking mode" once final adjustments have been made. Simply repeat the above step until a flashing "L" shows on the display ("U" for unlocked, "L" for locked).

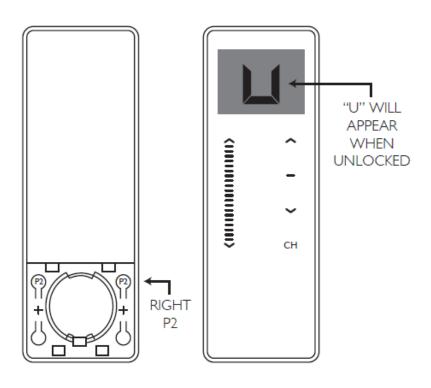


4. Reverse Motor Direction If Required (Options A or B)

Option A - REMOTE OPERATION (Only Possible During Initial Setup Or After Factory Reset Before Limits Are Set)


To check motor direction, quickly press the UP <u>or</u> DOWN button to move the shade initially. Press STOP to pause the shade operation.

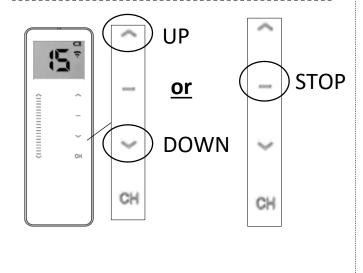

IF DIRECTION DOES NOT ALIGN WITH UP/DOWN BUTTONS – Press and hold down the UP <u>and</u> DOWN button simultaneously until the motor jogs UP and DOWN once.

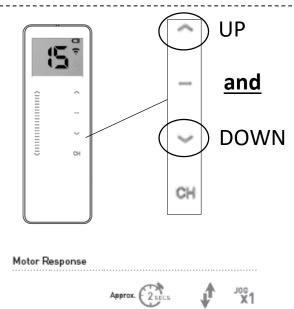

Option B - MOTOR OPERATION (Possible At Any Time)

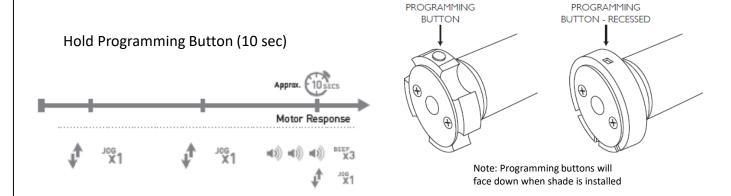


5. Setting Limits

SETTING UPPER/LOWER LIMITS

Important!! Stop shade prior to traveling past the desired position or damage to product can occur

Drive the shade using continuous movement or fine adjust to the position you wish to set as the upper limit. Set limit as described below. 3 beeps from the motor will confirm the limit is saved. Repeat the same process to drive to and set the lower limit.

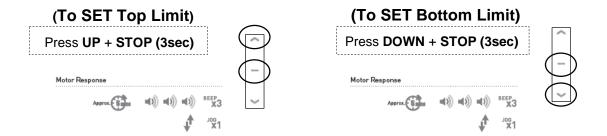

!!WARNING!! - Move shade in short increments by pressing the UP/DOWN button in 1 second intervals (pressing the UP/DOWN button for more than 3 seconds may send the shade past desired upper/lower limit and may result in damage to the product). Once you have reached the desired upper/lower limit, you can adjust the limit with either the UP and DOWN buttons. (remember to adjust in short increments!)

Important!! Remember to return the remote control to "L" mode as previously described to prevent inadvertent shade adjustment during normal operation and remote handling.

Sleep Mode

Each battery & plug-in motor will come preprogramed from The Shade Store. Upon leaving the factory the motor is placed into "Sleep Mode" to avoid accidental operation during shipping.

(Applicable to tubular internal battery motors only, external battery motors do not have Sleep Mode.)


It is necessary to "Wake" the motor before operation and setup.

Exit Sleep Mode

To "Wake" the motor and exit Sleep Mode, assure the motor is installed and secured in the mounting hardware.

After the motor is installed in the brackets, press and hold the programming button on the motor head until the motor jogs up and down once. It is now no longer in "Sleep Mode" and ready for further setup.


* Warning, if you press and release the programming button quickly, the motor will lower to its lower limit. Be mindful of this during the install process.

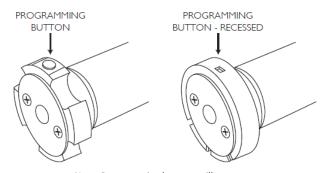

Note: Programming buttons will face down when shade is installed

Enter Sleep Mode

If required, to place the motor back into "Sleep Mode" press and hold the programming button for a period of 6 seconds. Release the button when the motor has jogged up and down twice. The motor will beep twice to signify "Sleep Mode" has been activated.

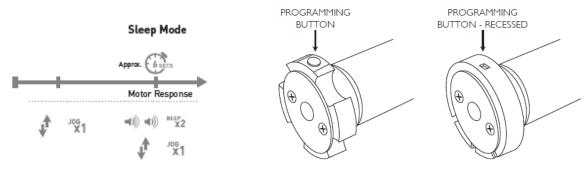

Note: Programming buttons will face down when shade is installed


Remote + Motor Pairing

Each battery & plug-in motor will come preprogramed from The Shade Store.


The preprograming assures the remote is paired with the motor, the upper and lower operation limits are set, the remote is locked and the unnecessary channels are hidden for ease of use (15 available).

Follow the below steps to select the remote channel you want to pair with the motor(s) if required at a later date.

1. SELECT CHANNEL

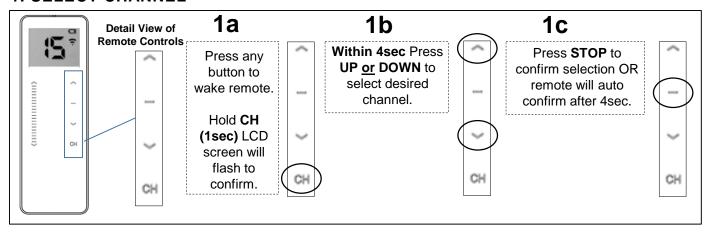

2. PAIRING OR REMOVING MOTOR FROM A SPECIFIC CHANNEL

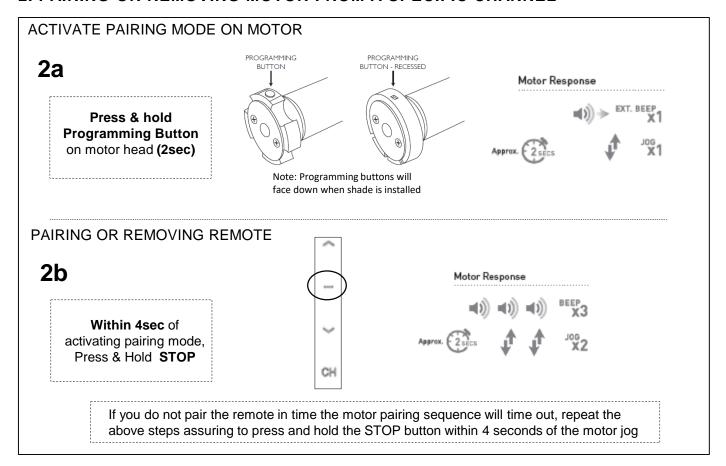

Reverse Motor Direction


Each battery & plug-in motor will come preprogramed from The Shade Store.

The preprograming assures the remote is paired with the motor, the upper and lower operation limits are set, the remote is locked and the unnecessary channels are hidden for ease of use (15 available).

To reverse the motor direction at any time, use the motor operation method shown below. (Applicable to internal tubular motors only, for external battery motors follow the below steps but only hold the programming button for 2 jogs)

MOTOR OPERATION (Possible At Any Time)

Hold Programming Button (10 sec) Approx. 10 secs Motor Response

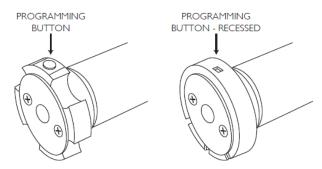

Note: Programming buttons will face down when shade is installed


Mirroring Remotes

Each battery & plug-in motor will come preprogramed from The Shade Store.

The preprograming assures the remote is paired with the motor, the upper and lower operation limits are set, the remote is locked and the unnecessary channels are hidden for ease of use (15 available).


Follow the below steps to copy settings from an existing remote to a new remote.

1. SELECT CHANNEL ON EXISTING REMOTE TO BE COPIED

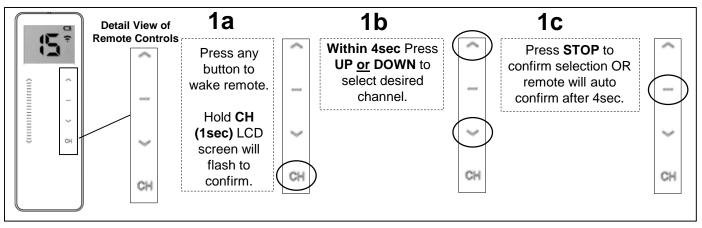

Note: Select channel on existing remote to be copied Select channel on new remote where existing channel will be copied

2. ADD OR REMOVE REMOTE USING AN EXISTING REMOTE

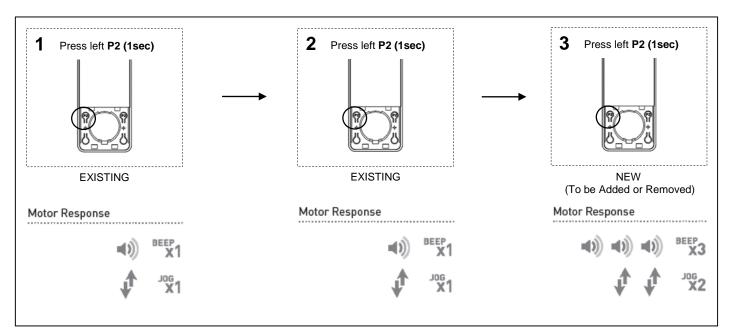

Adjusting Limits


Each battery & plug-in motor will come preprogramed from The Shade Store.


The preprograming assures the remote is paired with the motor, the upper and lower operation limits are set, the remote is locked and the unnecessary channels are hidden for ease of use (15 available).

Follow the below steps to adjust the upper and lower limits if required.

If limits need adjusting, follow the instructions below to unlock the remote for limit setting:

- Unlock the limit setting tool by pressing the right P2 button on the back of the remote (remove cover to expose the button)
- Press and hold the button until the LED display shows a flashing "U", then release.
- You will be required to set the remote back into "limit locking mode" once final adjustments have been made. Simply repeat the above step until a flashing "L" shows on the display ("U" for unlocked, "L" for locked).

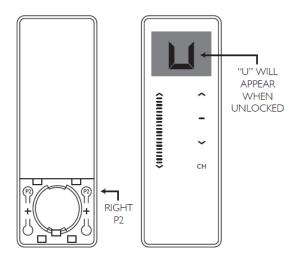

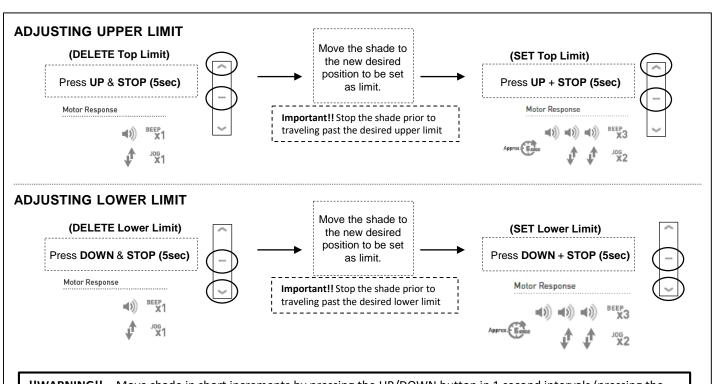

!!WARNING!! - Move shade in short increments by pressing the UP/DOWN button in 1 second intervals (pressing the UP/DOWN button for more than 3 seconds may send the shade past desired upper/lower limit and may result in damage to the product). Once you have reached the desired upper/lower limit, you can adjust the limit with either the UP and DOWN buttons. (remember to adjust in short increments!)

Tilt Mode (Wood Blind Only)


Each battery & plug-in motor will come preprogramed from the factory.

The preprograming assures the remote is paired with the motor, the upper and lower operation limits are set, the remote is locked and the unnecessary channels are hidden for ease of use (15 available).

Follow the below steps to switch between tilt mode (incremental movement) or roller mode (drives to limits) on any motor. The motor must be paired to a remote and the remote must be unlocked to execute this procedure. Motors come programmed by default in roller mode.


If limits need adjusting, follow the instructions below to unlock the remote for limit setting:


- Unlock the limit setting tool by pressing the right P2 button on the back of the remote (remove cover to expose the button)
- Press and hold the button until the LED display shows a flashing "U", then release.
- You will be required to set the remote back into "limit locking mode" once final adjustments have been made. Simply repeat the above step until a flashing "L" shows on the display ("U" for unlocked, "L" for locked).

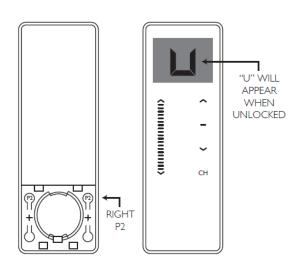

With the remote unlocked. Hold the UP and DOWN button on the controller for approximately 5 seconds. The motor will jog up and down once.

Immediately after the motor jogs, press and hold the STOP button. The motor will jog up and down and beep to confirm Tilt Mode has been entered.

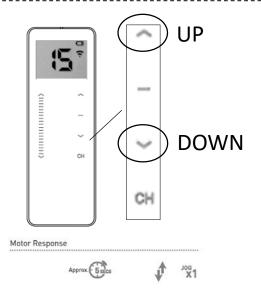

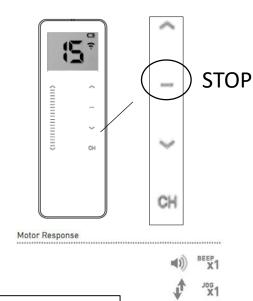

Repeat the above procedure to re-enter Roller Mode

If you do not activate tilt mode in time the motor programming sequence will time out, repeat the above steps assuring to press the STOP button within 4 seconds of the motor jog

Hide/Unhide Remote Channels

Each battery & plug-in motor will come preprogramed from The Shade Store.


The preprograming assures the remote is paired with the motor, the upper and lower operation limits are set, the remote is locked and the unnecessary channels are hidden for ease of use (15 available).

Follow the below steps to hide and unhide channels on the remote.

Press & Hold STOP + CH


Remote Response
LCD screen flashes
"15" which defaults remote

control to 15 visible channels

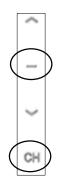


Release only STOP

Keep CH pressed for the entire procedure

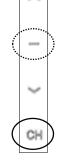


3

Press **UP or DOWN** to select number of active channels

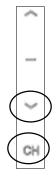

4

Press **STOP**, then release **CH** to confirm

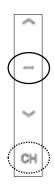

Favorite Positions

Each battery & plug-in motor will come preprogramed from The Shade Store.

The preprograming assures the remote is paired with the motor, the upper and lower operation limits are set, the remote is locked and the unnecessary channels are hidden for ease of use (15 available).


Follow the below steps to set a favorite position. The favorite position is used to set a custom stopping point between the upper and lower limits. (1 favorite position per shade motor)


To set a favorite position for a shade motor, drive to the desired position and press the STOP button to pause the drive operation.


SETTING FAVORITE POSITION

1 (To Save Position)


Press UP or DOWN to move shade to desired favorite position

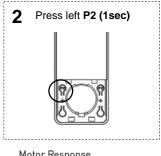

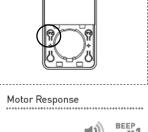

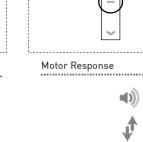

Press STOP (1sec)

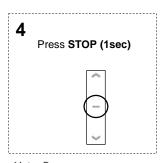




- Press STOP (3sec) to move shade to the Favorite Position from any location
- Repeat Steps 1-4 for all additional motors


DELETING FAVORITE POSITION

1 (To Delete Position)


Press STOP (3 sec) to send the shade to the stored favorite position.

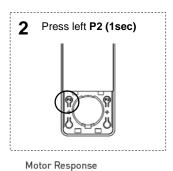



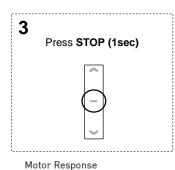



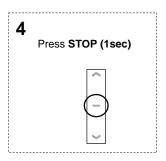




Group Control

Each battery & plug-in motor will come preprogramed from The Shade Store. If multiple motors are paired to the same 15 channel remote, the 0 channel is the default channel to control all motors at once.

Follow the steps below to group motors on a specific channel for simultaneous control.


To custom define a channel to control multiple motors, pairing in groups can be executed. This will allow you to operate a series of motors in unison without needing to change channels. Each motor to be grouped must be paired with the remote on its own channel prior to grouping.

1. SELECT CHANNEL TO BE PAIRED AS A GROUP

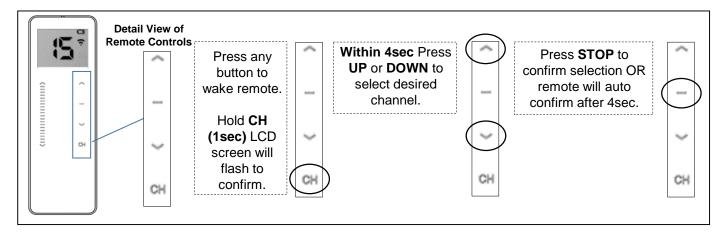

2. PAIRING REMOTE TO MOTOR


(Repeat for all motors to be added or removed from your desired group channel.)

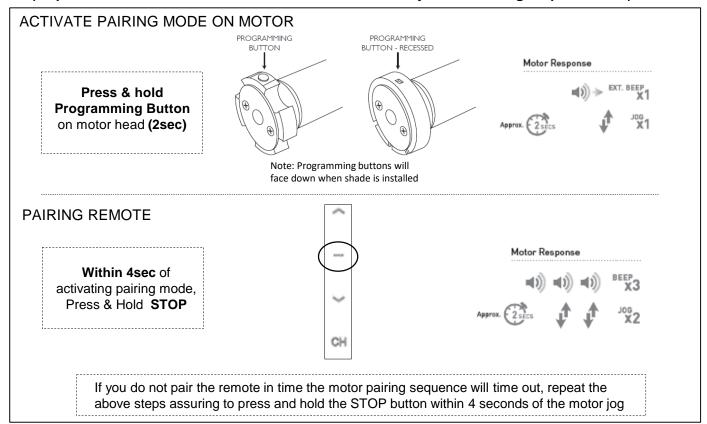

Group Control


3. Adjusting limits of an individual shade paired on a group channel

To adjust the limits of a shade that is currently grouped on a channel with other shades, it is necessary to place all shades with the exception of the shade to be adjusted, to sleep.

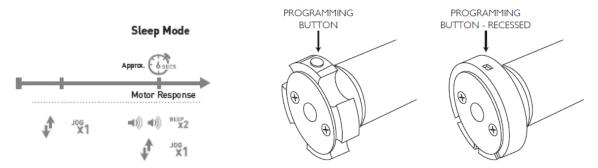

Note: Programming buttons will face down when shade is installed

Once all other shades have been put to sleep, unlock remote by pressing and holding the upper left P2 button under the battery cover until "U" is displayed on the LCD screen. Adjust the shade limits as outlined below:

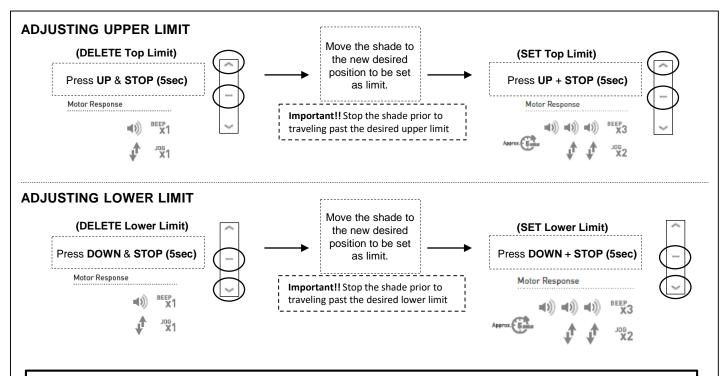

!!WARNING!! - Move shade in short increments by pressing the UP/DOWN button in 1 second intervals (pressing the UP/DOWN button for more than 3 seconds may send the shade past desired upper/lower limit and may result in damage to the product). Once you have reached the desired upper/lower limit, you can adjust the limit with either the UP and DOWN buttons. (remember to adjust in short increments!)

Once the limits have been adjusted as desired, return the remote control to "L" mode by pressing and holding the upper left P2 button under the battery cover. The other grouped motors can now be taken out of sleep mode by holding the programming button for 6 seconds

Reset to Factory Settings


Each battery & plug-in motor will come preprogramed from The Shade Store.

The preprograming assures the remote is paired with the motor, the upper and lower operation limits are set, the remote is locked and the unnecessary channels are hidden for ease of use (15 available).

Follow the below steps to reset the motor to factory settings and delete all limits/remote pairings.

To reset the shade motor to factory settings with no stored limits locate the P1 button on the motor head. Hold the programming button for 14 seconds. (4 motor jogs)

(**External battery motors will jog 3 times for a full factory reset**)

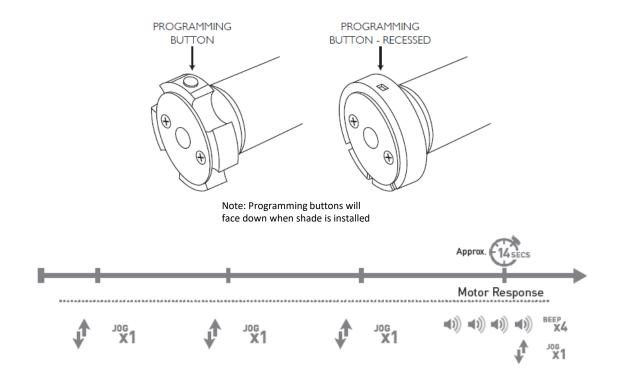

The motor will jog 4 times before the reset is complete. The P1 button must be held the entire time. 4 beeps confirm the factory reset is complete.

(**External battery motors will jog 3 times for factory reset**)

Refer to the Initial Setup Programming section to program a shade after a factory reset.


Adjusting Motor Speed


Each battery & plug-in motor will come preprogramed from The Shade Store.

The preprograming assures the remote is paired with the motor, the upper and lower operation limits are set, the remote is locked and the unnecessary channels are hidden for ease of use (15 available).

Follow the below steps to adjust the motor speed (ONLY APPLICABLE TO BATTERY MOTORS). To adjust the motor speed a remote must be paired.

To enter speed adjustment mode remove the rear battery cover of the remote. Press and hold the left P2 button for 2 seconds. The motor will perform one up and down jog and beep once.

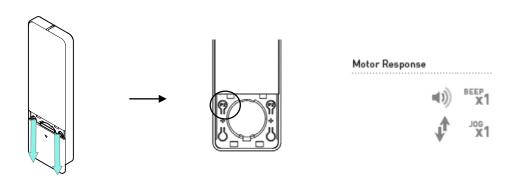

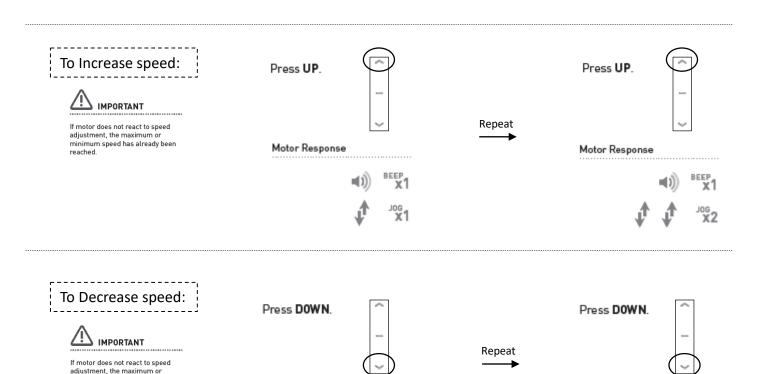

minimum speed has already been

Motor Response

Motor Response

Troubleshooting

PROBLEM	CAUSE	REMEDY
Motor is not responding	Remote battery is dis- charged	Replace battery
	Battery is inserted incorrectly	Check battery polarity
	Radio interference / Shielding	Ensure remote is positioned away from metal objects and that aerial on motor or receiver is kept straight and away from metal.
	Receiver distance is too far from remote	Move remote to a closer position.
	Power failure	Check power supply to motor is connected and active.
	Incorrect wiring	Check wiring is connected correctly (refer to motor installation instructions)
Cannot set limits on a single Motor (multiple motors respond)	Using "group" channels to adjust motor limits	Always reserve an individual channel for programming functions. SYSTEM BEST PRACTICE – Provide an extra 15 channel remote in your multi-mater projects, that
		channel remote in your multi motor projects, that provides individual control for each motor for programming purposes.