


Remote Overview

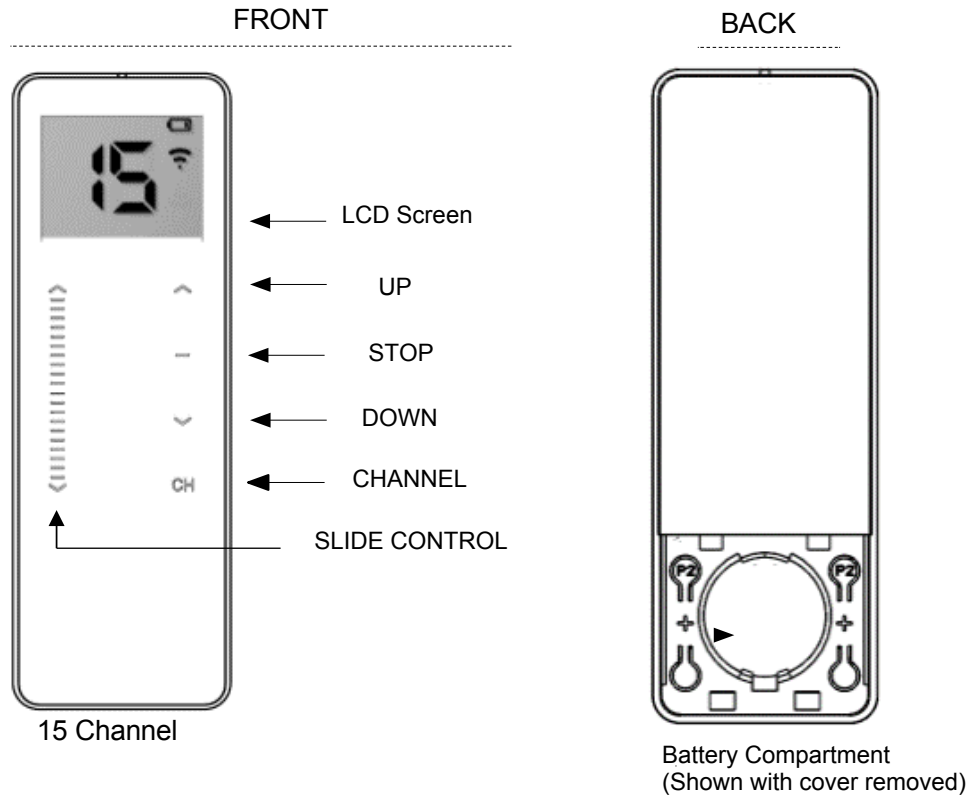

TECHNICAL SPECIFICATIONS

Voltage:	3V (CR2450)
Frequency:	433.92 MHz
Transmitting Power:	10 milliwatt
Ambient Operating Temperature:	-10°C - 50°C
Transmission Distance:	Up to 200 meters (open space)
Battery:	CR2450


FEATURES

- Touch sensitive controls
- Levelling control (15 Channel Remote)
- LCD Display (15 channel Remote)
- Hide unused channels function
- Slim magnetic wall mount holder


PACKAGE CONTENTS

- Remote
- Magnetic holder & fixing screws
- Instruction Manual
- 3V - CR2450 Battery

INSTALL WALL MOUNT HOLDER

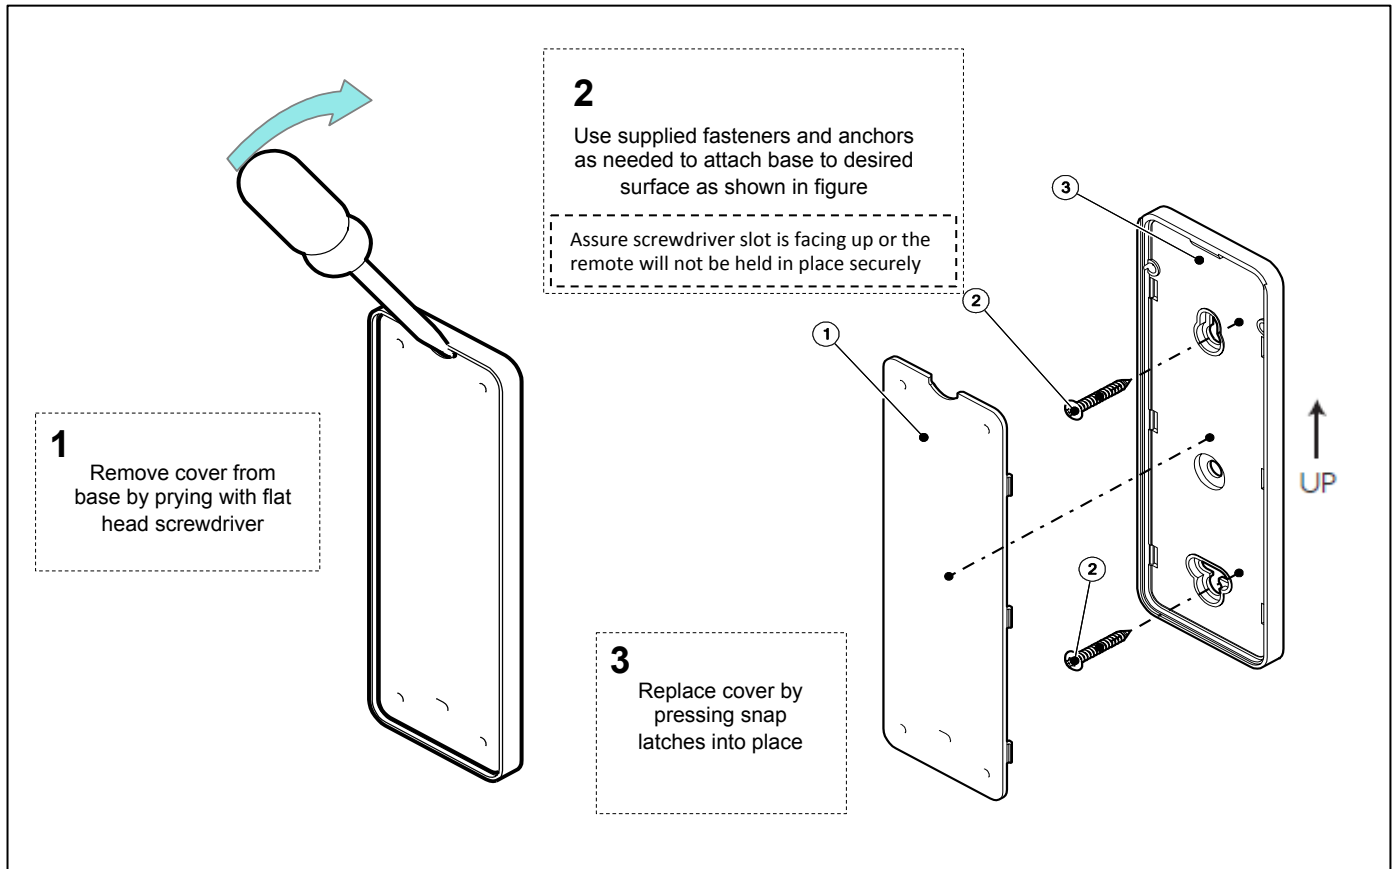


INSTALL AND/OR REPLACE REMOTE BATTERY

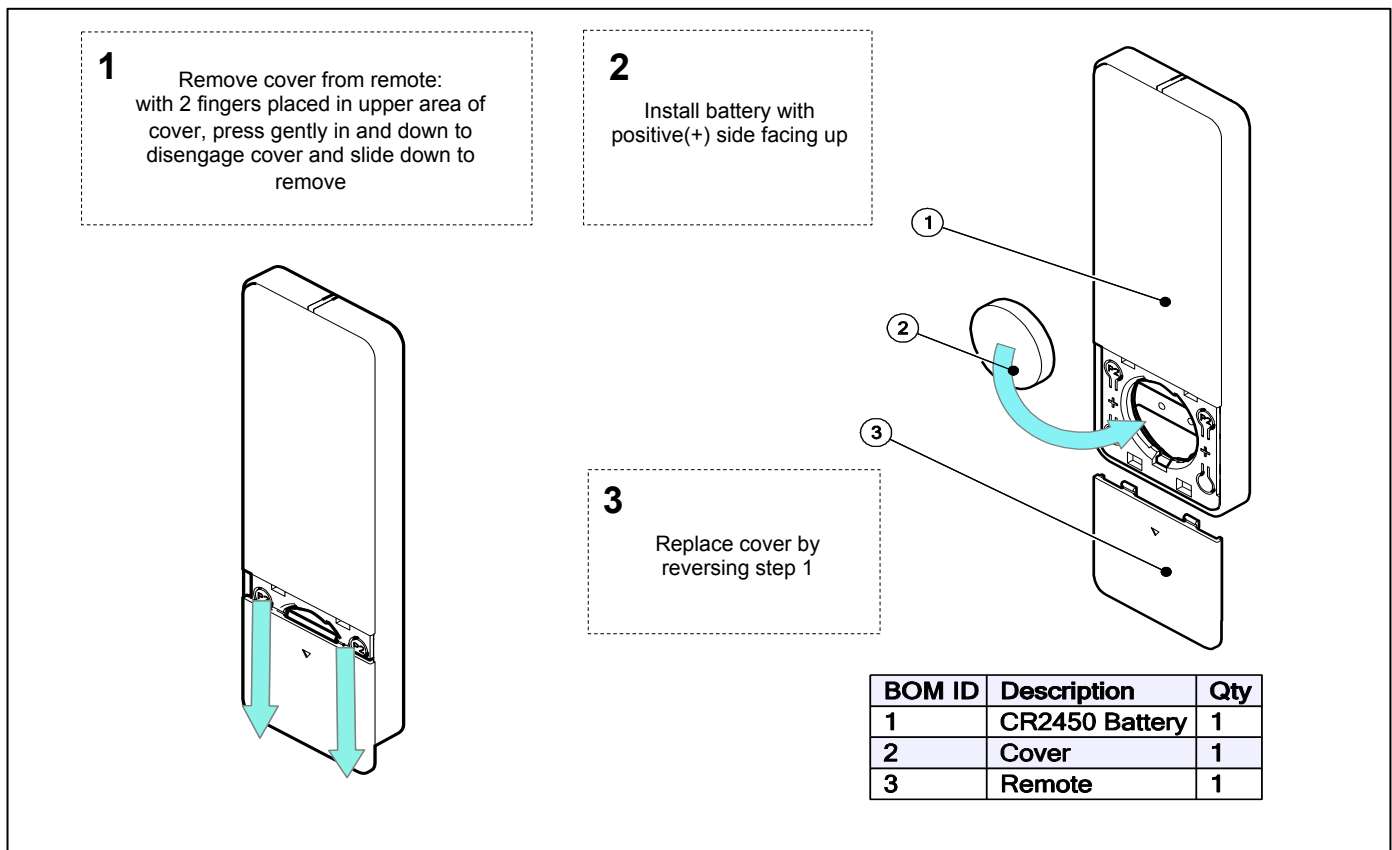


Initial Setup Programming

1. SELECT CHANNEL TO BE PAIRED

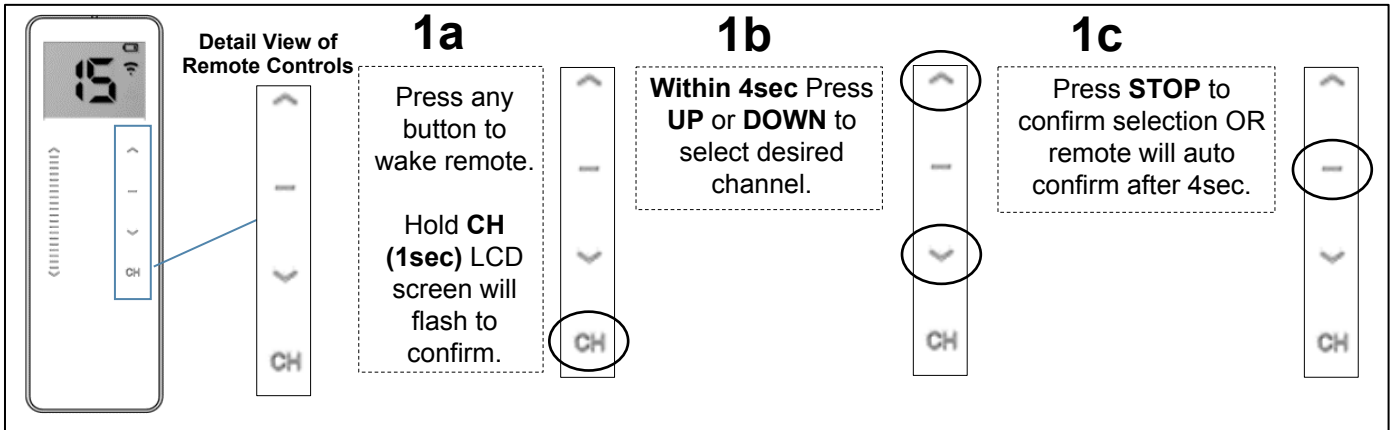

2. PAIRING REMOTE TO MOTOR

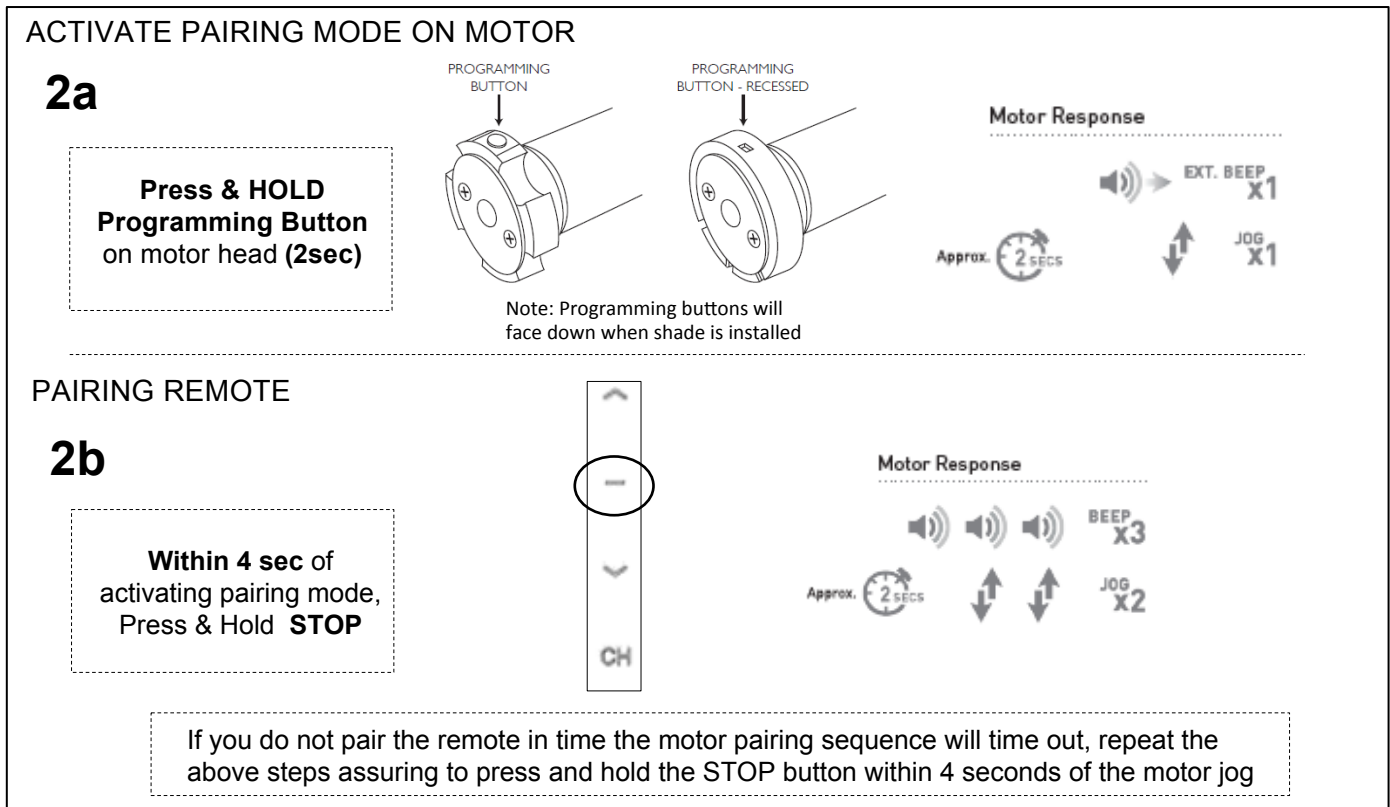


Initial Setup Programming

3. Unlock/Lock Remote (Limit Setting Mode)

If limits need adjusting, follow the instructions below to unlock the remote for limit setting:

- Unlock the limit setting tool by pressing the right P2 button on the back of the remote (remove cover to expose the button)
- Press and hold the button until the LED display shows a flashing "U", then release.
- You will be required to set the remote back into "limit locking mode" once final adjustments have been made. Simply repeat the above step until a flashing "L" shows on the display ("U" for unlocked, "L" for locked).

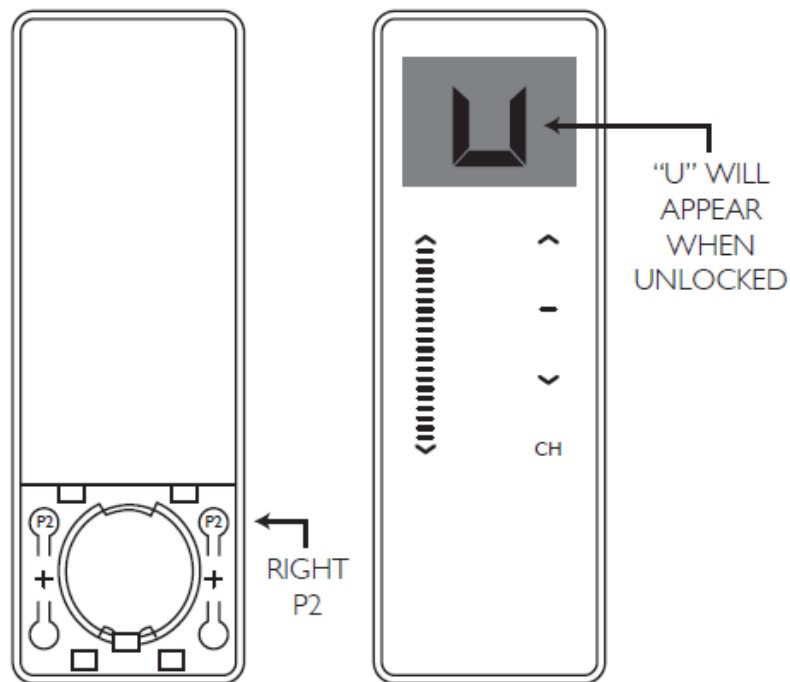


Initial Setup Programming

4. Reverse Motor Direction If Required (Options A or B)


Option A - REMOTE OPERATION

(Only Possible During Initial Setup Or After Factory Reset Before Limits Are Set)

To check motor direction, quickly press the UP or DOWN button to move the shade initially. Press STOP to pause the shade operation.

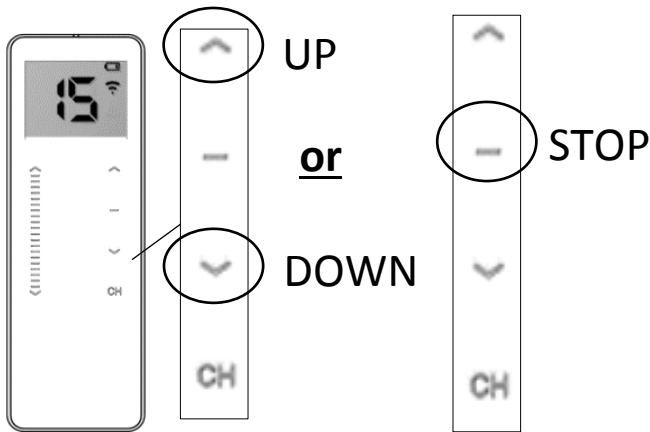

IF DIRECTION DOES NOT ALIGN WITH UP/ DOWN BUTTONS – Press and hold down the UP and DOWN button simultaneously until the motor jogs UP and DOWN once.

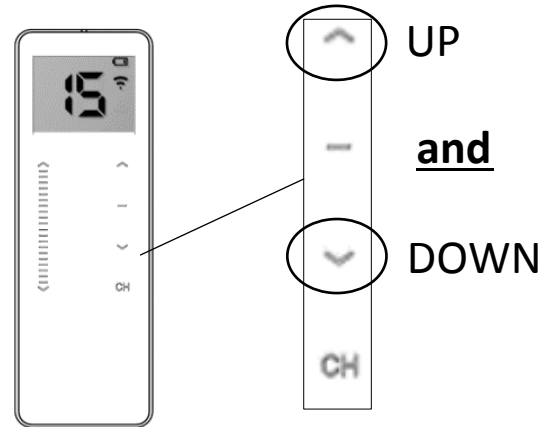


Motor Response




Option B - MOTOR OPERATION (Possible At Any Time)


Hold Programming Button (10 sec)

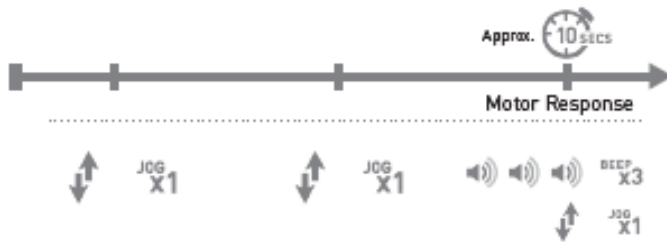

PROGRAMMING BUTTON

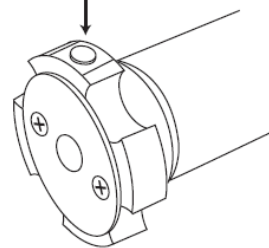

PROGRAMMING BUTTON - RECESSED

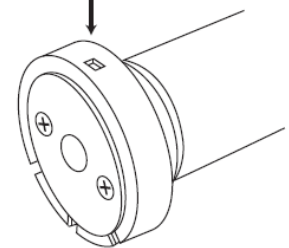

Note: Programming buttons will face down when shade is installed

Initial Setup Programming

5. Setting Limits

SETTING UPPER/LOWER LIMITS

Important!! Stop shade prior to traveling past the desired position or damage to product can occur

Drive the shade using continuous movement or fine adjust to the position you wish to set as the upper limit. Set limit as described below. 3 beeps from the motor will confirm the limit is saved. Repeat the same process to drive to and set the lower limit.

(To SET Top Limit)

Press **UP + STOP (3sec)**

Motor Response



(To SET Bottom Limit)

Press **DOWN + STOP (3sec)**

Motor Response



!!WARNING!! - Move shade in short increments by pressing the UP/DOWN button in 1 second intervals (pressing the UP/DOWN button for more than 3 seconds may send the shade past desired upper/lower limit and may result in damage to the product). Once you have reached the desired upper/lower limit, you can adjust the limit with either the UP and DOWN buttons. (remember to adjust in short increments!)

Important!! Remember to return the remote control to "L" mode as previously described to prevent inadvertent shade adjustment during normal operation and remote handling.

Sleep Mode


Each battery & plug-in motor will come preprogrammed from The Shade Store. Upon leaving the factory the motor is placed into “Sleep Mode” to avoid accidental operation during shipping.

It is necessary to “Wake” the motor before operation and setup.

Exit Sleep Mode

To “Wake” the motor and exit Sleep Mode assure the motor is installed and secured in the mounting hardware.


Press the programming button (button or recessed based on motor size) and quickly release. The motor will jog once (1 up and 1 down movement). It is now no longer in “Sleep Mode” and ready for further setup.

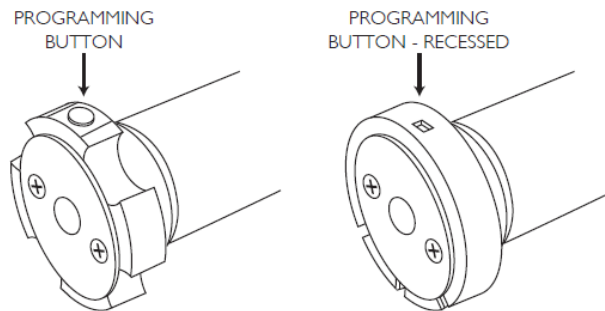

Note: Programming buttons will face down when shade is installed

Enter Sleep Mode

If required, to place the motor back into “Sleep Mode” press and hold the programming button for a period of 6 seconds. Release the button when the motor has jogged up and down twice. The motor will beep twice to signify “Sleep Mode” has been activated.

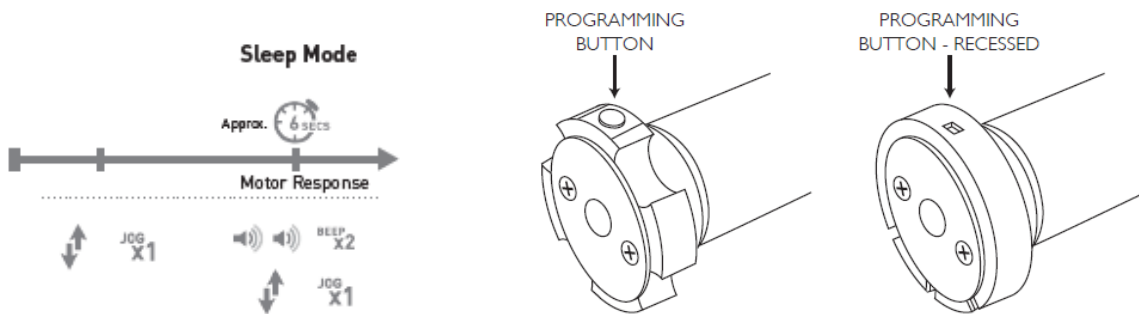

Note: Programming buttons will face down when shade is installed

Remote + Motor Pairing

Each battery & plug-in motor will come preprogrammed from The Shade Store. The preprogramming assures the remote is paired with the motor, the upper and lower operation limits are set, the remote is locked and the unnecessary channels are hidden for ease of use (15 available).

Follow the below steps to select the remote channel you want to pair with the motor(s) if required at a later date.

1. SELECT CHANNEL

Detail View of Remote Controls

1a

Press any button to wake remote.

Hold **CH** (1sec) LCD screen will flash to confirm.

1b

Within 4sec Press **UP** or **DOWN** to select desired channel.

1c

Press **STOP** to confirm selection OR remote will auto confirm after 4sec.

2. PAIRING OR REMOVING MOTOR FROM A SPECIFIC CHANNEL

ACTIVATE PAIRING MODE ON MOTOR

2a

Press & hold **Programming Button** on motor head (2sec)

PROGRAMMING BUTTON

PROGRAMMING BUTTON - RECESSED

Note: Programming buttons will face down when shade is installed

Motor Response

Approx. 2 SECS

EXT. BEEP X1

JOG X1

PAIRING OR REMOVING REMOTE

2b

Within 4sec of activating pairing mode, Press & Hold **STOP**

Motor Response

Approx. 2 SECS

BEEP X3

JOG X2



If you do not pair the remote in time the motor pairing sequence will time out, repeat the above steps assuring to press and hold the STOP button within 4 seconds of the motor jog

Reverse Motor Direction

Each battery & plug-in motor will come preprogrammed from The Shade Store. The preprogramming assures the remote is paired with the motor, the upper and lower operation limits are set, the remote is locked and the unnecessary channels are hidden for ease of use (15 available).

To reverse the motor direction at any time, use the motor operation method shown below.

MOTOR OPERATION (Possible At Any Time)

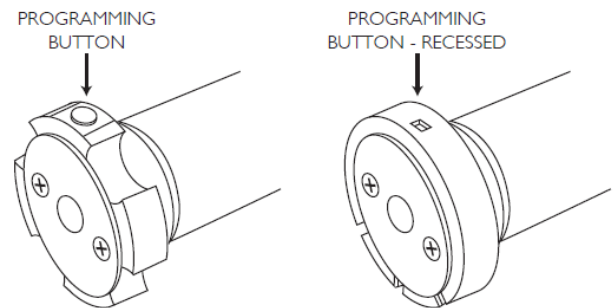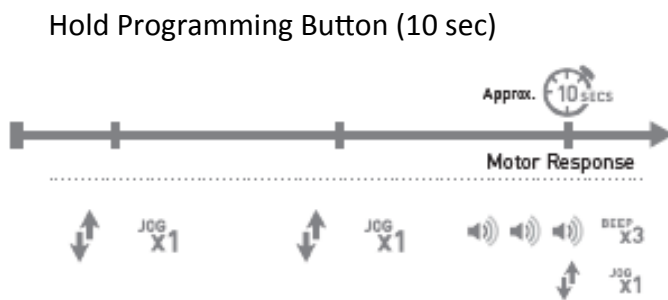


Note: Programming buttons will face down when shade is installed

Mirroring Remotes

Each battery & plug-in motor will come preprogrammed from The Shade Store. The preprogramming assures the remote is paired with the motor, the upper and lower operation limits are set, the remote is locked and the unnecessary channels are hidden for ease of use (15 available).


Follow the below steps to copy settings from an existing remote to a new remote.

1. SELECT CHANNEL ON EXISTING REMOTE TO BE COPIED

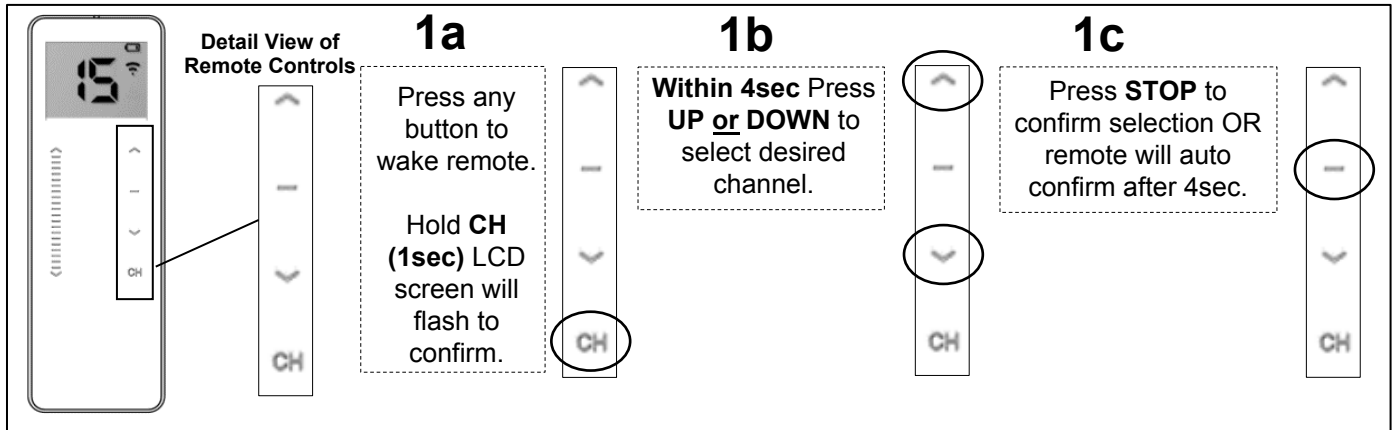

Note: Select channel on existing remote to be copied
Select channel on new remote where existing channel will be copied

2. ADD OR REMOVE REMOTE USING AN EXISTING REMOTE

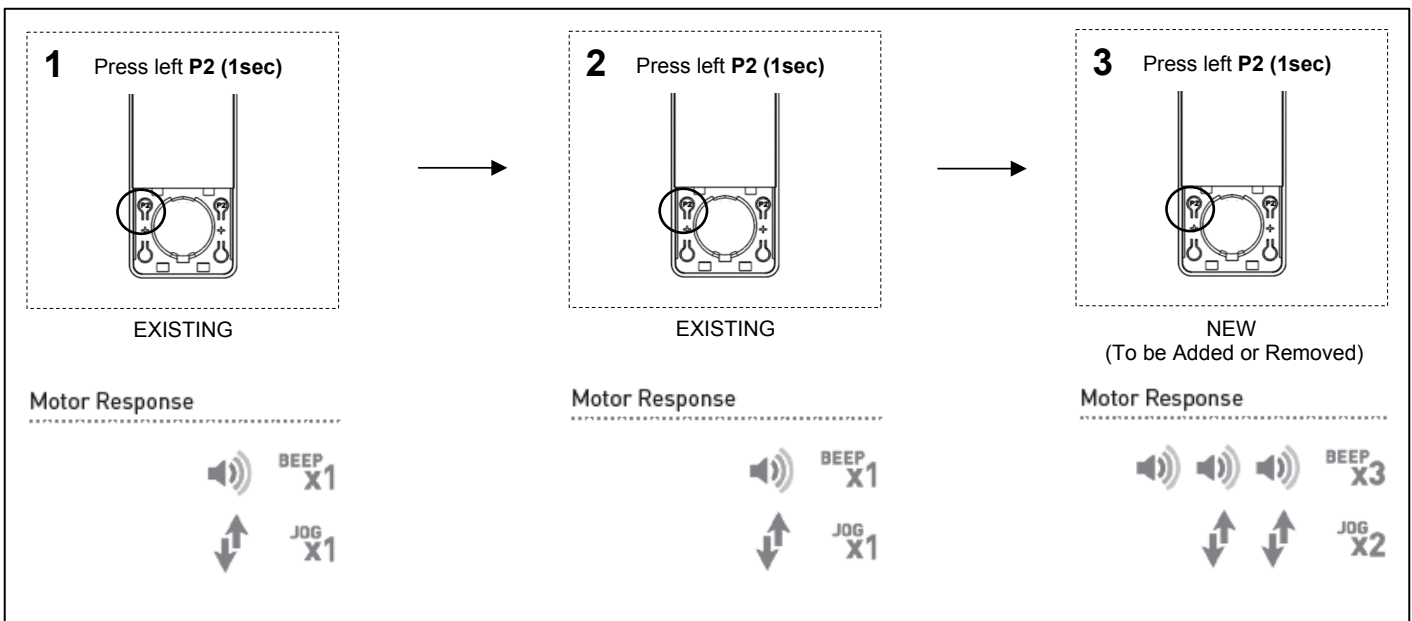


Adjusting Limits

Each battery & plug-in motor will come preprogrammed from The Shade Store. The preprogramming assures the remote is paired with the motor, the upper and lower operation limits are set, the remote is locked and the unnecessary channels are hidden for ease of use (15 available).

Follow the below steps to adjust the upper and lower limits if required.

If limits need adjusting, follow the instructions below to unlock the remote for limit setting:

- Unlock the limit setting tool by pressing the right P2 button on the back of the remote (remove cover to expose the button)
- Press and hold the button until the LED display shows a flashing "U", then release.
- You will be required to set the remote back into "limit locking mode" once final adjustments have been made. Simply repeat the above step until a flashing "L" shows on the display ("U" for unlocked, "L" for locked).

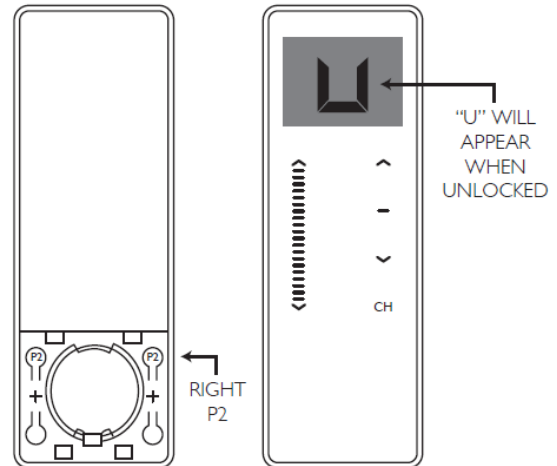


ADJUSTING UPPER LIMIT

(DELETE Top Limit)

Press UP & STOP (5sec)

 Motor Response

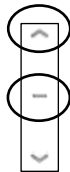


Move the shade to the new desired position to be set as limit.

Important!! Stop the shade prior to traveling past the desired upper limit

(SET Top Limit)

Press UP + STOP (5sec)

 Motor Response

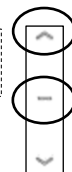

ADJUSTING LOWER LIMIT

(DELETE Lower Limit)

Press DOWN & STOP (5sec)

Motor Response



 
Move the shade to the new desired position to be set as limit.

Important!! Stop the shade prior to traveling past the desired lower limit

(SET Lower Limit)

Press DOWN + STOP (5sec)

Motor Response

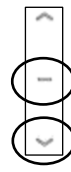

!!WARNING!! - Move shade in short increments by pressing the UP/DOWN button in 1 second intervals (pressing the UP/DOWN button for more than 3 seconds may send the shade past desired upper/lower limit and may result in damage to the product). Once you have reached the desired upper/lower limit, you can adjust the limit with either the UP and DOWN buttons. (remember to adjust in short increments!)


Tilt Mode (Wood Blind Only)

Each battery & plug-in motor will come preprogrammed from The Shade Store. The preprogramming assures the remote is paired with the motor, the upper and lower operation limits are set, the remote is locked and the unnecessary channels are hidden for ease of use (15 available).

Follow the below steps to switch between tilt mode (incremental movement) or roller mode (drives to limits) on any motor. The motor must be paired to a remote and the remote must be unlocked to execute this procedure. Motors come programmed by default in roller mode.



If limits need adjusting, follow the instructions below to unlock the remote for limit setting:

- Unlock the limit setting tool by pressing the right P2 button on the back of the remote (remove cover to expose the button)
- Press and hold the button until the LED display shows a flashing "U", then release.
- You will be required to set the remote back into "limit locking mode" once final adjustments have been made. Simply repeat the above step until a flashing "L" shows on the display ("U" for unlocked, "L" for locked).

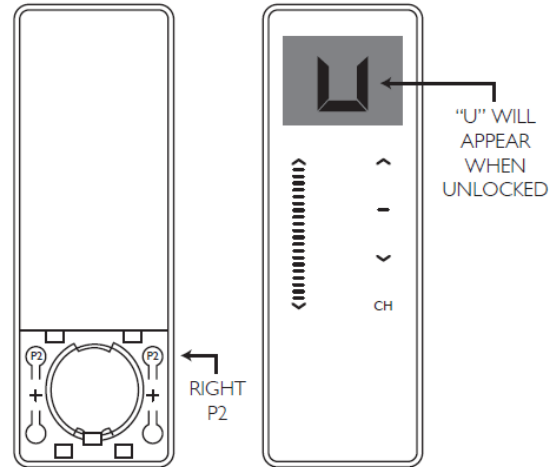

With the remote unlocked. Hold the UP and DOWN button on the controller for approximately 5 seconds. The motor will jog up and down once.

Immediately after the motor jogs, press and hold the STOP button. The motor will jog up and down and beep to confirm Tilt Mode has been entered.

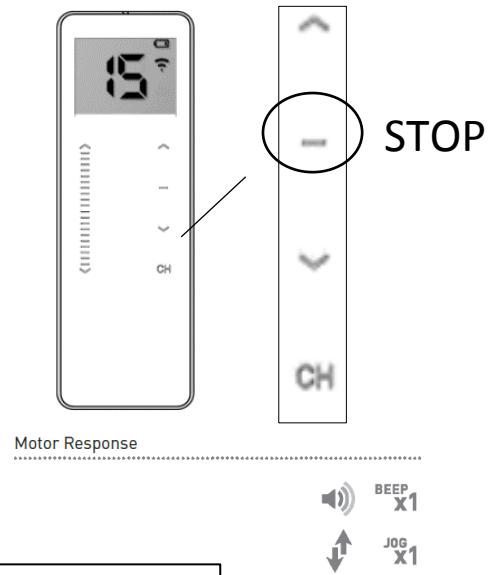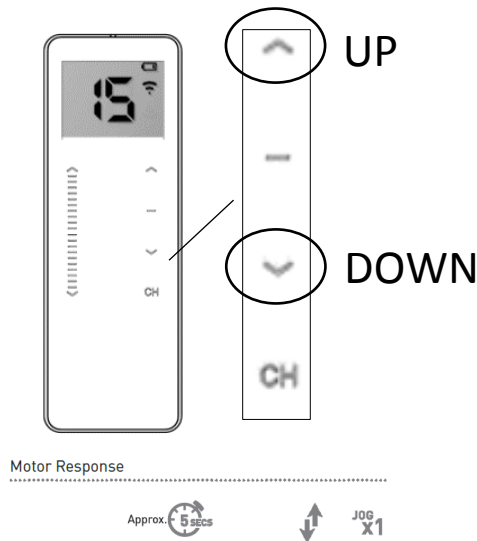

Repeat the above procedure to re-enter Roller Mode

If you do not activate tilt mode in time the motor programming sequence will time out, repeat the above steps assuring to press the STOP button within 4 seconds of the motor jog

Hide/Unhide Remote Channels

Each battery & plug-in motor will come preprogrammed from The Shade Store. The preprogramming assures the remote is paired with the motor, the upper and lower operation limits are set, the remote is locked and the unnecessary channels are hidden for ease of use (15 available).

Follow the below steps to hide and unhide channels on the remote.

1

Press & Hold **STOP + CH**

Remote Response
LCD screen flashes
"15" which defaults remote
control to 15 visible channels



2

Release only **STOP**

Keep **CH** pressed for
the entire procedure



3

Press **UP** or **DOWN** to select
number of active channels



4

Press **STOP**, then
release **CH** to confirm












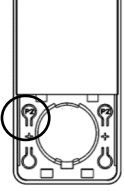


Favorite Positions

Each battery & plug-in motor will come preprogrammed from The Shade Store. The preprogramming assures the remote is paired with the motor, the upper and lower operation limits are set, the remote is locked and the unnecessary channels are hidden for ease of use (15 available).

Follow the below steps to set a favorite position. The favorite position is used to set a custom stopping point between the upper and lower limits. (1 favorite position per shade motor)










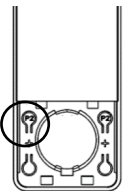

To set a favorite position for a shade motor, drive to the desired position and press the STOP button to pause the drive operation.

SETTING FAVORITE POSITION

1 (To Save Position) Press UP or DOWN to move shade to desired favorite position	2 Press left P2 (1sec) 	3 Press STOP (1sec) 	4 Press STOP (1sec) 
	Motor Response  BEEP X1  JOG X1	Motor Response  BEEP X1  JOG X1	Motor Response    BEEP X3   JOG X2

- Press **STOP** (3sec) to move shade to the Favorite Position from any location
- Repeat Steps 1-4 for all additional motors

DELETING FAVORITE POSITION

1 (To Delete Position) Press STOP (3 sec) to send the shade to the stored favorite position.	2 Press left P2 (1sec) 	3 Press STOP (1sec) 	4 Press STOP (1sec) 
	Motor Response  BEEP X1  JOG X1	Motor Response  BEEP X1  JOG X1	Motor Response    EXT. BEEP X1  JOG X1


Group Control

Each battery & plug-in motor will come preprogrammed from The Shade Store. If multiple motors are paired to the same 15 channel remote, the 0 channel is the default channel to control all motors at once.

Follow the steps below to group motors on a specific channel for simultaneous control.

To custom define a channel to control multiple motors, pairing in groups can be executed. This will allow you to operate a series of motors in unison without needing to change channels. Each motor to be grouped must be paired with the remote on its own channel prior to grouping.

1. SELECT CHANNEL TO BE PAIRED AS A GROUP

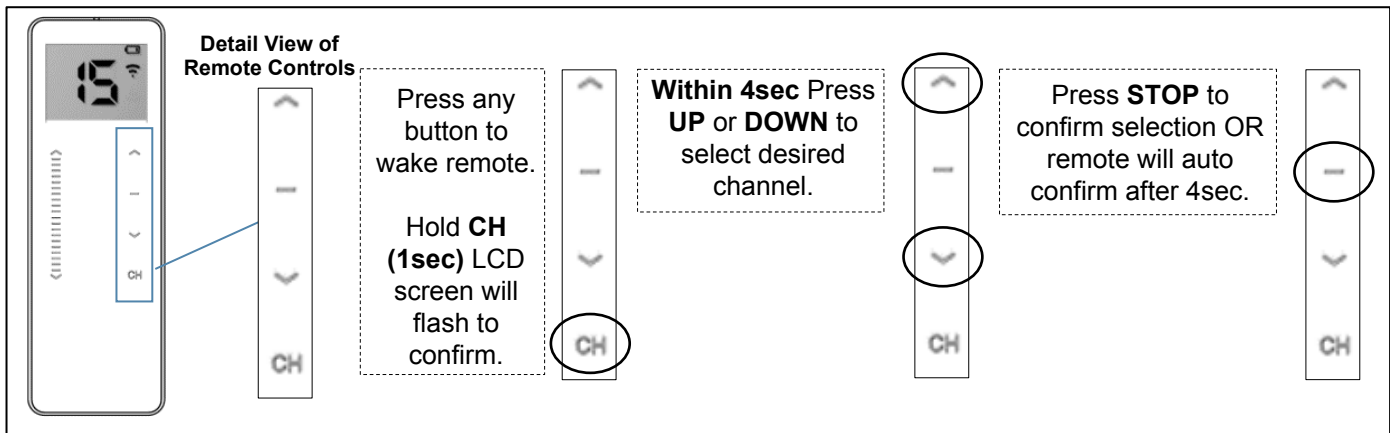


2. PAIRING REMOTE TO MOTOR

(Repeat for all motors to be added or removed from your desired group channel.)

ACTIVATE PAIRING MODE ON MOTOR

Press & hold Programming Button on motor head (2sec)

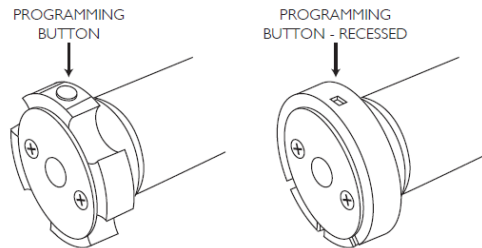

Note: Programming buttons will face down when shade is installed

Motor Response



PAIRING REMOTE

Within 4sec of activating pairing mode, Press & Hold **STOP**



Motor Response




If you do not pair the remote in time the motor pairing sequence will time out, repeat the above steps assuring to press and hold the STOP button within 4 seconds of the motor jog

Group Control

3. Adjusting limits of an individual shade paired on a group channel

To adjust the limits of a shade that is currently grouped on a channel with other shades, it is necessary to place all shades with the exception of the shade to be adjusted, to sleep.

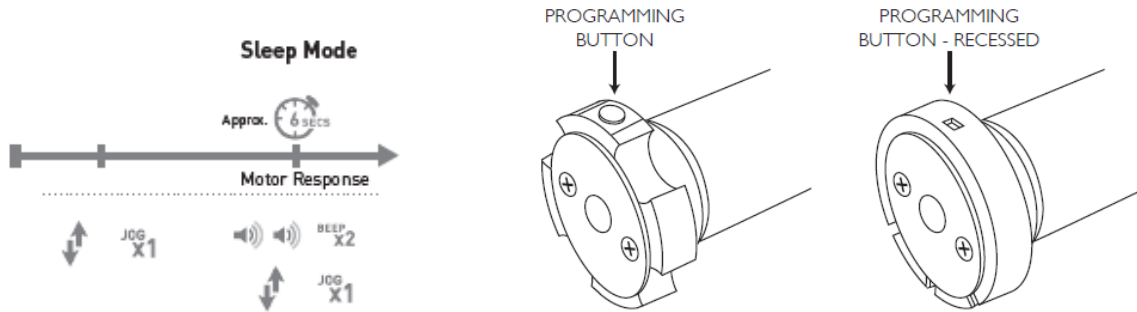

Note: Programming buttons will face down when shade is installed

 
Once all other shades have been put to sleep, unlock remote by pressing and holding the upper left P2 button under the battery cover until "U" is displayed on the LCD screen. Adjust the shade limits as outlined below:

ADJUSTING UPPER LIMIT

(DELETE Top Limit)

Press UP & STOP (5sec)

Motor Response




Move the shade to the new desired position to be set as limit.

Important!! Stop the shade prior to traveling past the desired upper limit

(SET Top Limit)

Press UP + STOP (5sec)

 Motor Response



ADJUSTING LOWER LIMIT

(DELETE Lower Limit)

Press DOWN & STOP (5sec)

Motor Response



 
Move the shade to the new desired position to be set as limit.

Important!! Stop the shade prior to traveling past the desired lower limit

(SET Lower Limit)

Press DOWN + STOP (5sec)

Motor Response



!!WARNING!! - Move shade in short increments by pressing the UP/DOWN button in 1 second intervals (pressing the UP/DOWN button for more than 3 seconds may send the shade past desired upper/lower limit and may result in damage to the product). Once you have reached the desired upper/lower limit, you can adjust the limit with either the UP and DOWN buttons. (remember to adjust in short increments!)


Once the limits have been adjusted as desired, return the remote control to "L" mode by pressing and holding the upper left P2 button under the battery cover. The other grouped motors can now be taken out of sleep mode by holding the programming button for 6 seconds

Reset to Factory Settings

Each battery & plug-in motor will come preprogrammed from The Shade Store. The preprogramming assures the remote is paired with the motor, the upper and lower operation limits are set, the remote is locked and the unnecessary channels are hidden for ease of use (15 available).

Follow the below steps to reset the motor to factory settings and delete all limits.

To reset the shade motor to factory settings with no stored limits locate the P1 button on the motor head. Hold the programming button for 14 seconds. (4 motor jogs)

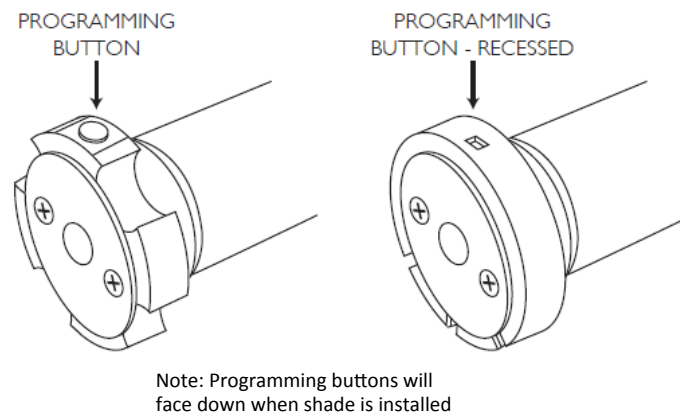

The motor will jog 4 times before the reset is complete. The P1 button must be held the entire time. 4 beeps confirm the factory reset is complete.


 
Refer to the Initial Setup Programming section to program a shade after a factory reset.

Adjusting Motor Speed

Each battery & plug-in motor will come preprogrammed from The Shade Store. The preprogramming assures the remote is paired with the motor, the upper and lower operation limits are set, the remote is locked and the unnecessary channels are hidden for ease of use (15 available).

Follow the below steps to adjust the motor speed. To adjust the motor speed, a remote must be paired.

To enter speed adjustment mode remove the rear battery cover of the remote. Press and hold the left P2 button for 2 seconds. The motor will perform one up and down jog and beep once.

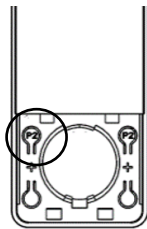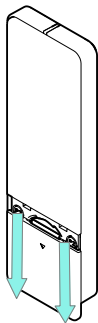

Motor Response



To Increase speed:



IMPORTANT

If motor does not react to speed adjustment, the maximum or minimum speed has already been reached.

Press **UP**.



 
Motor Response



Repeat



Press **UP**.

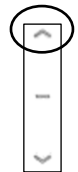

Motor Response



To Decrease speed:



IMPORTANT

If motor does not react to speed adjustment, the maximum or minimum speed has already been reached.

Press **DOWN**.



Motor Response



Repeat



Press **DOWN**.



Motor Response

