

ESSEX HARDWARE INSTALLATION INSTRUCTIONS


Getting Started: Please read through all instructions carefully before you begin installation.

Unpack all materials making sure all components are included:

- Pole
- Drapery rings (optional)
- Mounting hardware
- Finials

Tools You Will Need:

- Drill with $\frac{1}{8}$ " bit and a phillips bit
- Phillips screwdriver
- Metal tape measure

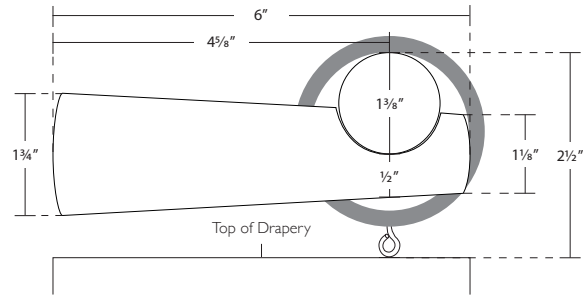

* Please note the important dimensions above as they will be helpful in determining your installation height.


INSTALLING WALL MOUNT - SINGLE SET: Please read through all instructions carefully before you begin.

1 Mark

Mark the height you would like the top of your drapery pole to be installed, taking into account any clearance or puddling you desire at the bottom, as well as top of pole to top of drapery difference – 2 1/2".

2 Mount


1 3/8" Down from mark make a second mark and pre-drill a small hole at this mark using a 1/8" drill bit or a starter nail (we recommend using a molly plug to ensure secure mount if not installing directly into wood). Install bracket by screwing into hole. Turn clockwise until secure and in correct position to accept pole. Do not over tighten.

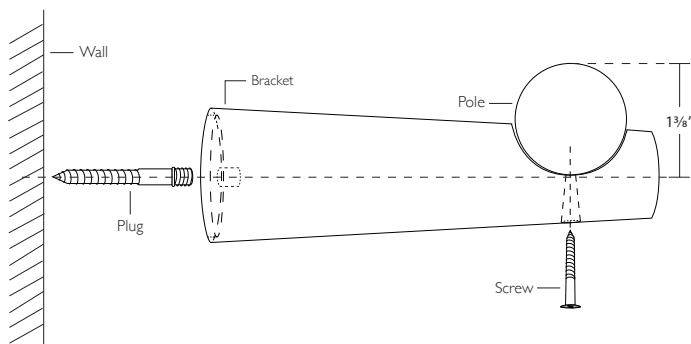

3 Attach Rings and Pole

Slide rings onto pole. You may want to leave one ring on the outside of each of the end brackets.

Set the pole onto the brackets and secure with screws thru bottom of each bracket.

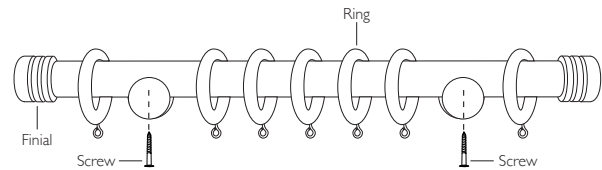

4 Attach Finials

Attach finial to both ends of the pole.