


## MEASURING FOR **BETTER BASICS CELLULAR SHADES**

### CHOOSE A MOUNT TYPE:


#### INSIDE MOUNT

- Mounted within the window frame
- Provides a clean built-in look
- Great way to leave attractive woodwork exposed
- 3/4" minimum depth required for secure mount\*
- If window frame isn't deep enough, please select outside mount

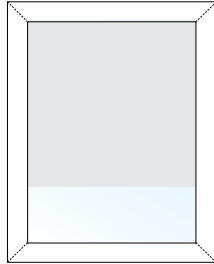


#### OUTSIDE MOUNT

- Great option when there is not enough depth for an inside mount
- Mounted to the wall, ceiling or molding surface surrounding the window
- Often used to make the window appear larger or to hide a less attractive window or door
- No minimum depth requirement

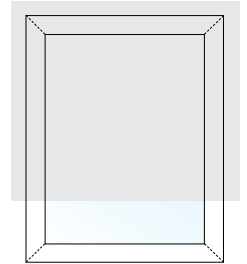


#### STEP 1

Measure the inside width at 3 locations - the top, middle and bottom. Record the smallest of the 3 measurements. This is your ordering width. We will make the necessary deductions (approx. 1/4" - 3/8")

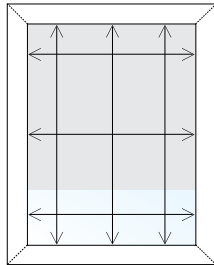

#### STEP 1

Measure the width of the area you wish to cover. If space allows we recommend adding 2-3" (1-1 1/2" each side) to this measurement to help eliminate light seepage. This is your ordering width and will be the overall measurement of the shade.

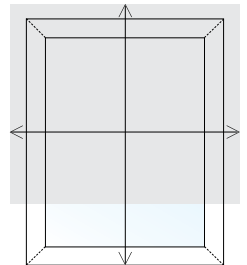

#### STEP 2

Measure the height at 3 locations - the left side, middle and right side. Record the largest of the 3 measurements. This is your ordering length.

#### STEP 2

Measure the height of the area you wish to cover. This is your ordering length.

### MOUNTING REQUIREMENTS

PRODUCT	HEADRAIL SIZE	MINIMUM DEPTH required for secure inside mount	MINIMUM DEPTH required for flush inside mount	MINIMUM SPACE required for outside mount	INSIDE MOUNT DEDUCTIONS
Better Basics Cellular Shade	1 3/4"	3/4"	2"	5/8"	-3/8"

**DON'T HAVE TIME TO MEASURE? WE'LL DO IT - FREE.**

Call 800.754.1455 or visit [theshadestore.com/measure](http://theshadestore.com/measure) to schedule a free professional measurement.