


MEASURING FOR PANEL TRACK BLINDS

CHOOSE A MOUNT TYPE:

INSIDE MOUNT

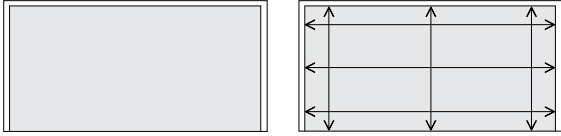

- Mounted within the window frame or wall-to-wall
- Provides a clean built-in look
- 1¼" minimum depth required
- If window frame isn't deep enough, please select outside or ceiling mount

STEP 1

Measure the inside width at 3 locations: the top, middle and bottom. Record the smallest of the 3 measurements. This is your ordering width. We will make the necessary deductions (approx. ½").


STEP 2

Measure the height at 3 locations - the left side, middle and right side. Record the longest of the 3 measurements. This is your ordering length and will be the measurement from the top of the track to the bottom of the panels.*

Workroom Note:

- *We recommend taking 1" off of this measurement for all Vertical Blinds to ensure panels/vanes are above the floor/sill.

OUTSIDE MOUNT

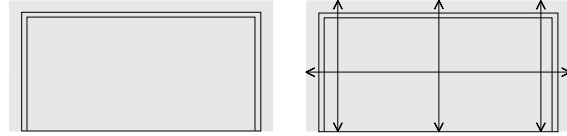

- Great option when there is not enough depth for an inside mount
- Mounted to the wall, ceiling or molding surface surrounding the window or directly to the ceiling.
- Creates an illusion of extra height to a room
- No minimum depth requirement

STEP 1

Measure the width of the area you wish to cover. This is your ordering width.

STEP 2

Measure the height of the area you wish to cover. This is your ordering length. Your ordering length will be the measurement from the top of the track to the bottom of the panels.

Workroom Note:

- We recommend that all Vertical Blinds hang 1" above floor/sill.

MEASURING FOR **PANEL TRACK BLINDS**

DEPTH REQUIREMENTS

COVERAGE WIDTH	DRAW TYPE	RAIL SIZE	# OF CHANNELS	# OF PANELS	Minimum Depth Required For Secure INSIDE MOUNT	Minimum Depth Required For Flush INSIDE MOUNT	Minimum Space Required For OUTSIDE MOUNT
up to 84"	One Way	2"	3	3	1¼"	2⅛"	2"
	Center Open	2"	3	4	1¼"	2⅛"	2"
84½" - 120"	One Way	2⅝"	4	4	2"	2¾"	2"
	Center Open	2"	3	4	1¼"	2⅛"	2"
120½" - 180"	One Way	3¼"	5	5	2"	3⅜"	2"
	Center Open	2⅝"	4	6	2"	2¾"	2"
180½" -216"	One Way	3¼"	5	5	2"	3⅜"	2"
	Center Open	3¼"	5	8	2"	3⅜"	2"

DON'T HAVE TIME TO MEASURE? WE'LL DO IT - FREE.

Call 800.754.1455 or visit theshadestore.com/measure to schedule a free professional measurement.