


## MEASURING FOR XL VERTICAL BLINDS

### CHOOSE A MOUNT TYPE:

#### INSIDE MOUNT

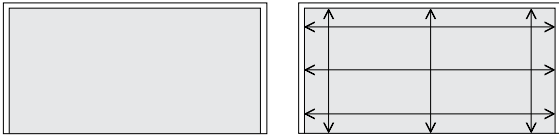

- Mounted within the window frame or wall-to-wall
- Provides a clean built-in look
- 6" minimum depth required
- If window frame isn't deep enough, please select outside or ceiling mount

#### STEP 1

Measure the inside width at 3 locations: the top, middle and bottom. Record the smallest of the 3 measurements. This is your ordering width. We will make the necessary deductions (approx. 1/2").


#### STEP 2

Measure the height at 3 locations - the left side, middle and right side. Record the longest of the 3 measurements. This is your ordering length and will be the measurement from the top of the track to the bottom of the panels.\*

#### Workroom Note:

- \*We recommend taking 1" off of this measurement for all Vertical Blinds to ensure panels/vanes are above the floor/sill.

#### OUTSIDE MOUNT

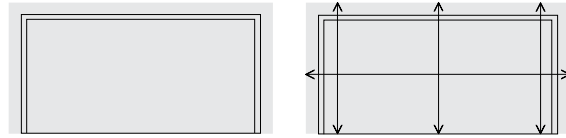

- Great option when there is not enough depth for an inside mount
- Mounted to the wall, ceiling or molding surface surrounding the window or directly to the ceiling.
- Creates an illusion of extra height to a room
- No minimum depth requirement

#### STEP 1

Measure the width of the area you wish to cover. This is your ordering width.

#### STEP 2

Measure the height of the area you wish to cover. This is your ordering length. Your ordering length will be the measurement from the top of the track to the bottom of the panels.

#### Workroom Note:

- We recommend that all Vertical Blinds hang 1" above floor/sill.

## MEASURING FOR **XL VERTICAL BLINDS**

### DEPTH REQUIREMENTS (minimum 48" wide)

<b>COVERAGE WIDTH</b>	<b>DRAW TYPE</b>	<b>RAIL SIZE</b>	Minimum Depth Required For Secure <b>INSIDE MOUNT</b>	Minimum Depth Required For Flush <b>INSIDE MOUNT</b>	Minimum Space Required For <b>OUTSIDE MOUNT</b>
up to 216"	One Way	1¾"	6"	10"	3⅛"
	Center Open	1¾"	6"	10"	3⅛"

**DON'T HAVE TIME TO MEASURE? WE'LL DO IT - FREE.**

Call 800.754.1455 or visit [theshadestore.com/measure](https://theshadestore.com/measure) to schedule a free professional measurement.