


MEASURING FOR WOVEN WOOD SHADES

CHOOSE A MOUNT TYPE:

INSIDE MOUNT

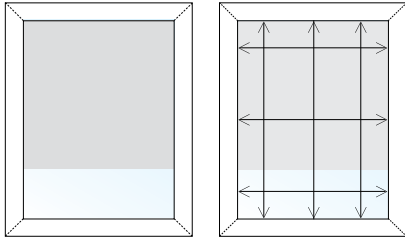

- Mounted inside your window's frame
- Provides a clean, built-in look
- Leaves attractive woodwork exposed
- There is a $\frac{3}{4}$ " minimum amount of space needed for this mount type. We call this measurement the minimum depth requirement.


STEP 1

Because not all windows are perfect rectangles, we recommend measuring the window in 3 places to get your width: across the top, middle and bottom (see diagram above). Round all measurements to nearest $\frac{1}{8}$ ". Take smallest number. This is your ordering width. We will make the necessary deductions (approx. $\frac{3}{8}$ " - $\frac{1}{2}$ ")

STEP 2

Finding the length is a similar process, measuring the length of the window in 3 places on the window: left, center and right. Round all measurements to nearest $\frac{1}{8}$ ". Take largest number. This is your ordering length.

OUTSIDE MOUNT

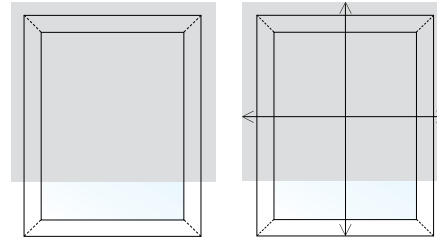

- Mounted outside or on top of the window's frame
- Provides a taller, more dramatic appearance
- There is no minimum depth requirement
- Shade comes with L-Brackets for wall or casing mount

STEP 1

Measure the width of the area you wish to cover. If space allows we recommend adding 2-3" (1 - $1\frac{1}{2}$ " each side) to this measurement to help eliminate light seepage. This is your ordering width and will be the overall measurement of the shade.

STEP 2

Measure the height of the area you wish to cover. This is your ordering length.

Workroom Note:

- For outside mount shades with upholstered valances, please note the valance will be 1" wider than your ordered width due to returns.

MEASURING FOR **WOVEN WOOD SHADES**

NATURALS DEPTH REQUIREMENTS

OPTIONS	HEADRAIL SIZES	Minimum Depth Required For Secure INSIDE MOUNT	Minimum Depth Required For Flush INSIDE MOUNT	Minimum Height Required For OUTSIDE MOUNT
Cord Lock	1¾"	¾"	1⅞"	2½"
Cord Lock w/ Minimized Headrail	¾"	¾"	⅞"	2"
Continuous Loop	2¼"	1¼"	2⅜"	3"
Continuous Loop w/ Minimized Headrail	1¾"	¾"	1⅞"	2½"
Cord Lock w/ Upholstered Valance	1¾"	1¼"	2¼"	2½"
Continuous Loop w/ Upholstered Valance	2¼"	1¼"	2¾"	3"
TDBU*	1¾"	1¼"	2¼"	2½"
Cordless*	2½"	1¼"	2⅝"	3"
Cordless w/ Upholstered Valance	2½"	1¼"	3"	3"
Multiple on 1 w/Cord Lock	1¾"	1¼"	2¼"	2½"
Multiple on 1 w/ Continuous Loop	2¼"	1¼"	2¾"	3"
Standard Style w/ Cord Lock	2½"	1¼"	3"	3"
Standard Style w/ Continuous Loop	2½"	1¼"	3"	3"
Motorized - TSS & Somfy**	3"	1¾"	3⅞"	3¾"
Motorized - TSS & Somfy w/ Upholstered Valance**	3"	1¾"	3⅞"	3¾"

Workroom Notes:

- ¾" minimized headrail can be requested for Cord Lock with Upholstered Valance and 2-on-1.
- *1 ¾" is smallest headrail available on TDBU and Standard Style. ¾" CANNOT be requested with these options.
- **Motorized Headrails cannot be customized smaller than standard sizes.

DON'T HAVE TIME TO MEASURE? WE'LL DO IT - FREE.

Call 800.754.1455 or visit theshadestore.com/measure to schedule a free professional measurement.

MEASURING FOR **WOVEN WOOD SHADES**

BAMBOO & GRASS DEPTH REQUIREMENTS

OPTIONS	HEADRAIL SIZES	Minimum Depth Required For Secure INSIDE MOUNT	Minimum Depth Required For Flush INSIDE MOUNT	Minimum Height Required For OUTSIDE MOUNT
Cord Lock	1½"	¾"	1¾"	1⅝"
Cord Lock w/ minimized Headrail	¾"	¾"	1"	1⅝"
Continuous Loop	2½"	1¼"	2¾"	1⅝"
Continuous Loop w/ minimized Headrail	1½"	¾"	1¾"	1⅝"
TDBU*	1½"	¾"	1¾"	1⅝"
Cordless*	2½"	1¼"	2¾"	1⅝"
Cordless w/ Standard Style Roman	2½"	1¼"	3"	1⅝"
Multiple on 1 w/ Cord Lock	1½"	¾"	2"	1⅝"
Multiple on 1 w/ Continuous Loop	2½"	1¼"	3"	1⅝"
Motorized - TSS & Somfy**	2¾"	1½"	3"	1⅝"
Motorized - TSS & Somfy w/ Standard Style Roman**	2¾"	1½"	3¼"	1⅝"

Workroom Notes:

- *1½" is smallest headrail available on TDBU and Standard Style. ¾" CANNOT be requested with these options.
- **Motorized Headrails cannot be customized smaller than standard sizes.

DON'T HAVE TIME TO MEASURE? WE'LL DO IT - FREE.

Call 800.754.1455 or visit theshadestore.com/measure to schedule a free professional measurement.