


INSTALLING YOUR SOMFY MOTORIZED ROLLER/SOLAR SHADE

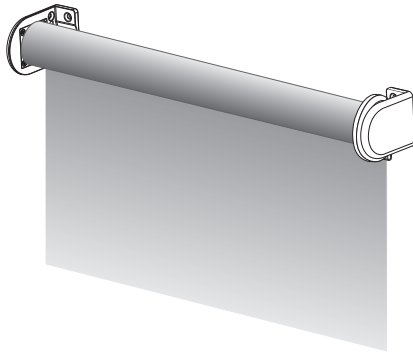

PARTS INCLUDED:


- 4x Screws (per shade)
- 2x Mounting Brackets (per shade)
- Battery Wand with Brackets*
- Solar Panel**
- Remote Control(s)

*Battery Motor Only
**Solar Battery Only


TOOLS YOU WILL NEED:

- Drill with a 1/8" bit & a Phillips bit
- Phillips Screwdriver
- Metal Tape Measure

MOUNT TYPE YOUR INSTALLING FOR:

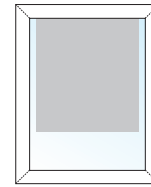

FOR INSIDE MOUNT
SEE SECTION 1A

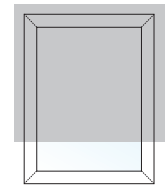


FOR OUTSIDE MOUNT
SEE SECTION 1B

Note: Your brackets must be securely attached to the mounting surface. If your screws are not secure you'll have to use a different fastener which can be found at any local hardware store.


1A. Mounting Your Brackets - Inside Mount

- Attach the brackets with two screws to the window frame, window molding, wall, or ceiling, as shown.
- Brackets are universal so they may be mounted on either side.
- There are few easy ways to install your brackets - choose which is best suited for your situation.


INSTALL BRACKETS UPWARD

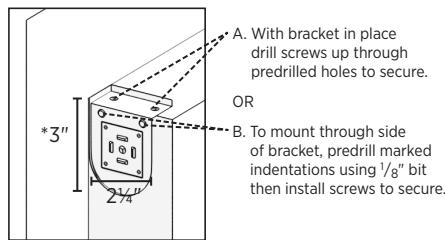

INSTALL BRACKETS STRAIGHT ON

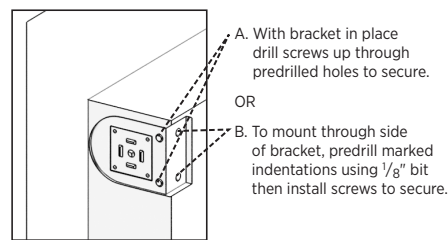

SHALLOW DEPTH BRACKET INSTALLATION

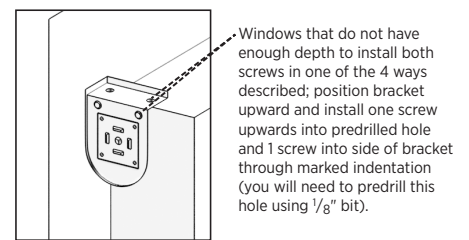


Note: For thicker fabrics, wider widths, or longer lengths, you may be provided with an extension bracket to accommodate a larger shade diameter. In this case, the measurement from the base of the bracket to the pinnacle of the bracket's curve would be 3 3/4".


1B. Mounting Your Brackets - Outside Mount

- Fit the shade into both brackets and center the shade over the window (this may take two people).
- With a pencil, mark the wall on the side of one bracket, remove the shade and attach the bracket with two screws.
- Insert the shade into the next bracket, hold the shade up and insert the other end into the already mounted bracket (make sure shade is level).
- Mark the wall on the side of the second bracket, remove shade, and attach the second bracket with two screws.


OUTSIDE WINDOW CASING/FRAME MOUNT

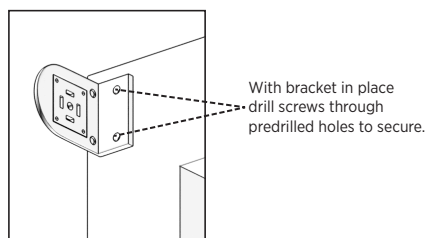

OUTSIDE MOUNT

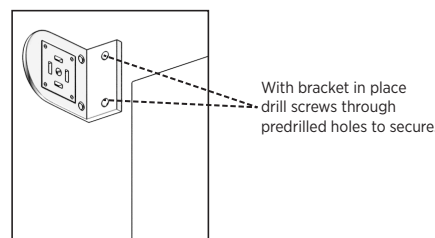

CEILING MOUNT

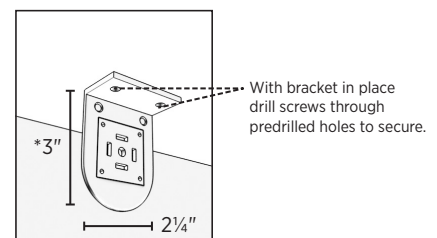

Note: For thicker fabrics, wider widths, or longer lengths, you may be provided with an extension bracket to accommodate a larger shade diameter. In this case, the measurement from the base of the bracket to the pinnacle of the bracket's curve would be 3 3/4".

2. Installing Your Shade

- With the brackets now installed, you may install your shade. Put the spring loaded pin end into the round hole of the bracket.
- Pushing the pin end towards its bracket, insert the hooks on the motor side straight into the two slots in the bracket [FIG 1].
- Once the two hooks are through the slots, gently pull down on the motor side until the two hooks have locked securely to the bracket (make sure hooks are facing down) [FIG 2].

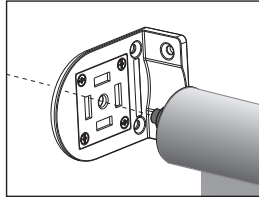


FIGURE 1 - Insert pin end


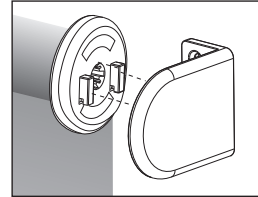




FIGURE 2 - Insert hooks and pull down

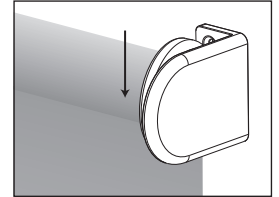

3A. Installing the Battery Wand (Battery Motor Only)

- Select the desired location for your Battery Wand and mark location.
- Install the Battery Clips at marked location, 6" from each other, on center, with the included screws. Be sure not to over-tighten the screws as this may cause damage the Battery Clips. Be sure that the Clips are level with each other.
- Gently press Battery Wand into clips until it snaps into position.
- Connect battery cable to motor head.

Note: If utilizing Installation **OPTION 2** Vertical Mount, slide the securing bands onto the Battery Wand prior to snapping into Battery Clips to ensure secure installation.

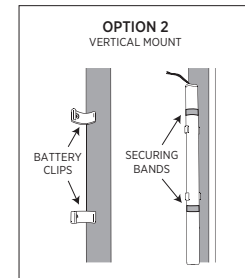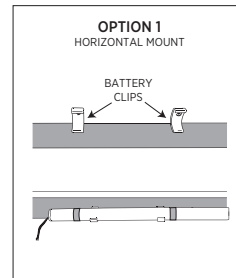

Battery Wand Min. Width is 17"

3B. Installing Your Solar Panel (Optional)

- Identify a part of the window that gets consistent natural light.
- Peel adhesive strips. Apply to the edges of the solar panel.
- Press and hold solar panel to window for 10 seconds until secure.



4. Powering on Your Shade

To Activate Your Battery Motor


- Products will have batteries pre-installed in the wand.
- Connect motor power cable to battery wand.

To Activate Your Solar Panel Motor (Optional)

- Connect power cable to solar panel power and battery wand.

To Activate the Plug-In Motor

- Plug your motor into the wall outlet that will power the shade.

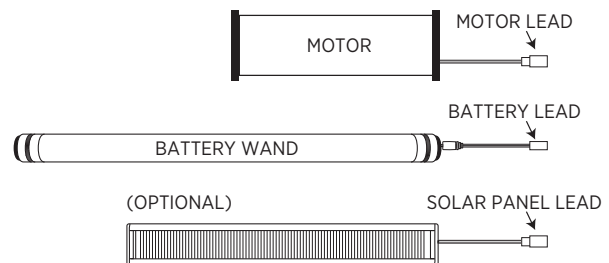

5. Operating Your Shade

- Your shades have been pre-programmed.
- A channel has been assigned to each motor based on your specifications.
- We've also set approximate upper and lower limits.
- For more information, see the Quick Start Guide that came with your shade or visit www.theshadestore.com/motors-help.


Care and Cleaning

Always clean with a low suction, hand held vacuum or dust with a soft, clean cloth or feather duster. If you're dealing with dirt and stains, we suggest using a Mr. Clean® magic eraser to spot treat dirt and stains. This is available online, at local home improvement stores or we can send directly to you via USPS (1-3 days) at no charge.

Warranty

The Shade Store products are covered by a limited lifetime warranty. This warranty covers any defects in materials or workmanship so long as the product is measured and installed according to instructions. Every Shade Store window treatment is designed to provide trouble-free use.

INSTALLING YOUR SOMFY MOTORIZED ROLLER & SOLAR SHADES WITH METAL VALANCE

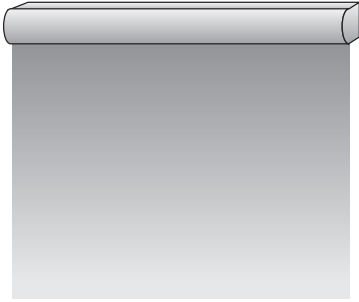


PARTS INCLUDED:

- 4x Screws (per shade)
- 2x Mounting Brackets
- Remote Control(s)


TOOLS YOU WILL NEED:

- Drill with a 1/8" bit & a Phillips bit
- Phillips Screwdriver
- Metal Tape Measure

MOUNT TYPE YOUR INSTALLING FOR:

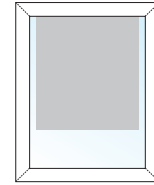

FOR INSIDE MOUNT
SEE SECTION 1A

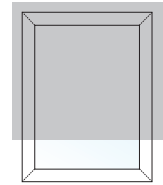


FOR OUTSIDE MOUNT
SEE SECTION 1B

Note: Your brackets must be securely attached to the mounting surface. If your screws are not secure you'll have to use a different fastener which can be found at any local hardware store.


1A. Mounting Your Shade - Inside Mount

- For inside or ceiling mounts, use the top bracket holes
- Make sure the release tab is always mounted on the bottom
- Mount the brackets to the wall or window frame, with the outside brackets no further than 2 inches (5 cm) from the ends of the valance. On wide shades, space the additional bracket(s) at equal intervals.

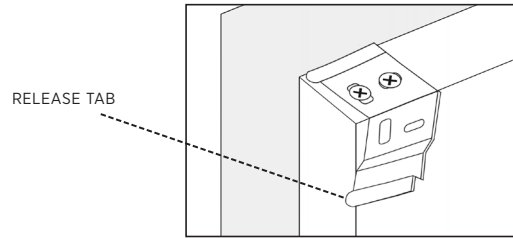


1B. Mounting Your Shade - Outside Mount

- For wall or outside mounts, use the rear bracket holes
- Make sure the release tab is always mounted on the bottom
- Mount the brackets to the wall or window frame, with the outside brackets no further than 2 inches (5 cm) from the ends of the valance. On wide shades, space the additional bracket(s) at equal intervals.

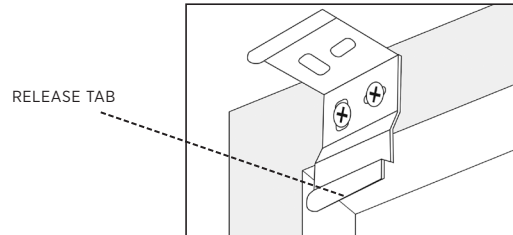

2. Mounting the Valance

- Position the valance with the front panel (A) resting on the top lip of all brackets.
- Push the bottom front of the valance firmly backwards and toward the window until the lip on the rear of the valances engages the bracket and snaps into place, (B) as shown.

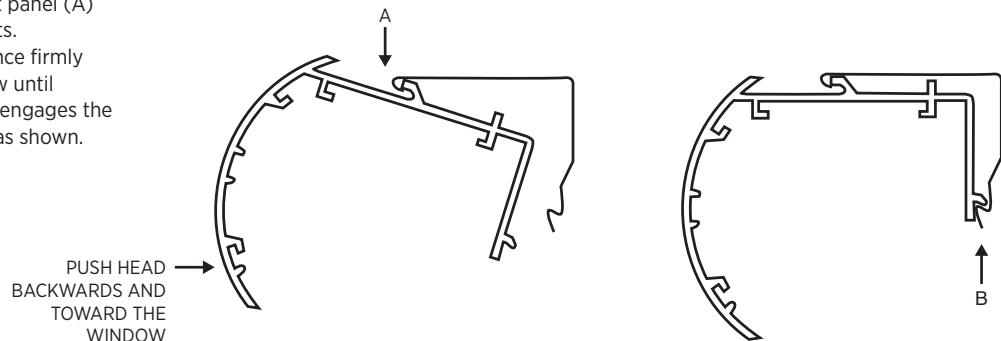

3. Powering on Your Shade

- Plug your motor into the wall outlet that will power the shade.
- The shade is ready to use.

4. Operating Your Shade

- Your shades have been pre-programmed.
- A channel has been assigned to each motor based on your specifications.
- We've also set approximate upper and lower limits.
- For more information, see the Quick Start Guide that came with your shade or visit www.theshadestore.com/motors-help.


Care and Cleaning

Always clean with a low suction, hand held vacuum or dust with a soft, clean cloth or feather duster. If you're dealing with dirt and stains, we suggest using a Mr. Clean® magic eraser to spot treat dirt and stains. This is available online, at local home improvement stores or we can send directly to you via USPS (1-3 days) at no charge.

Warranty

The Shade Store products are covered by a limited lifetime warranty. This warranty covers any defects in materials or workmanship so long as the product is measured and installed according to instructions. Every Shade Store window treatment is designed to provide trouble-free use.

INSTALLING YOUR SOMFY MOTORIZED ROLLER & SOLAR SHADES WITH UPHOLSTERED VALANCE

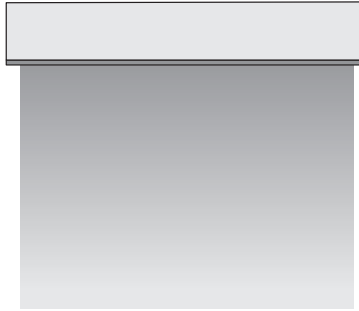

PARTS INCLUDED:

- 4x Screws (per shade)
- 2x Mounting Brackets (outside mount only)
- Battery Wand with Brackets*
- Remote Control(s)


*Battery Motor Only

Note: Your brackets must be securely attached to the mounting surface. If your screws are not secure you'll have to use a different fastener which can be found at any local hardware store.


TOOLS YOU WILL NEED:

- Drill with a 1/8" bit & a Phillips bit
- Phillips Screwdriver
- Metal Tape Measure

MOUNT TYPE YOUR INSTALLING FOR:

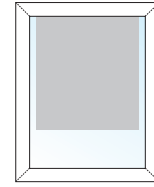

FOR INSIDE MOUNT
SEE SECTION 1A

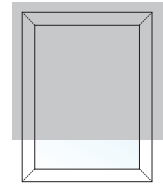

FOR OUTSIDE MOUNT
SEE SECTION 1B



1A. Mounting Your Upholstered Valance - Inside Mount

The shade and brackets come pre-mounted inside the valance. Before installing, remove the shade from the brackets. To remove, slightly lift the shade on the motor side and push the shade in the direction of the opposite bracket. [FIG 1]

Installing the Valance

The mounting holes are pre-drilled through the headrail/top of valance. (Inside mount does not require brackets). The pre-drilled holes may not be ideal for all install scenarios - if needed, you may pre-drill new holes as desired.

- Start the screws into the mounting holes [FIG 2] and tighten until the tips of the screws are slightly showing on the top of the headrail.
- Hold the valance inside the window frame.
- With the valance properly positioned, push up on the headrail (top) of the valance allowing the screw tips to leave a small indentation on the window frame.
- Drill a hole with an 1/8" drill bit at the indentations.
- Finish the job by drilling the screws in the headrail into the pre-drilled holes to secure the valance in place.

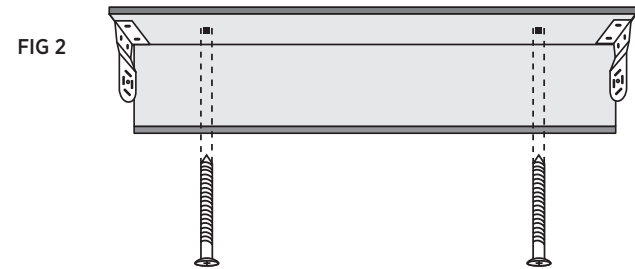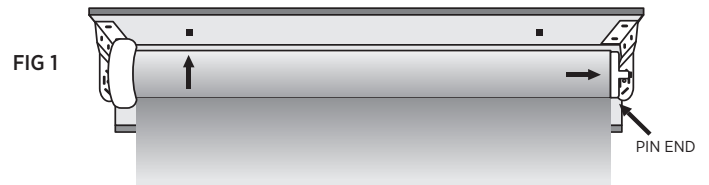

1B. Mounting Your Upholstered Valance - Outside Mount

The shade and brackets come pre-mounted inside the valance. Before installing, remove the shade from the brackets. To remove, slightly lift the shade on the motor side and push the shade in the direction of the opposite bracket. [FIG 1]

Install the Brackets

Valance will be attached to the window frame or wall with included brackets.

- Attach brackets to the wall or window frame at the desired height using the long screws provided. Make sure brackets are level. [FIG 3]


Install the Valance

- Set the headrail/top of valance on the brackets.
- Center the valance against the wall or window frame.
- Mark hole and pre-drill using a 1/8" drill bit at each bracket location.
- Attach the upholstered valance to the brackets using the short screws provided. [FIG 4]

FIG 3



FIG 4

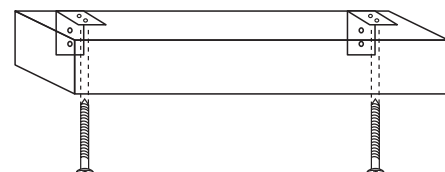


INSTALLING YOUR SOMFY MOTORIZED ROLLER & SOLAR SHADES WITH UPHOLSTERED VALANCE

2. Inserting the Shade into the Upholstered Valance

With the valance now installed, you may install your shade into the pre-mounted brackets on the sides of the valance:


- Put the spring loaded pin end into the round hole of the bracket.
- Pushing the pin end towards its bracket, insert the hooks on the motor side straight into the two slots in the bracket.
- Once the two hooks are through the slots, gently pull down on the motor side until the two hooks have locked securely to the bracket.

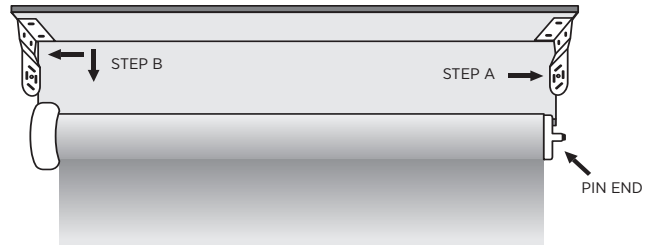

3A. Installing the Battery Wand (Battery Motor Only)

- Select the desired location for your Battery Wand and mark location.
- Install the Battery Clips at marked location, 6" from each other, on center, with the included screws. Be sure not to over-tighten the screws as this may cause damage the Battery Clips. Be sure that the Clips are level with each other.
- Gently press Battery Wand into clips until it snaps into position.
- Connect battery cable to motor head.


Note: If utilizing Installation **OPTION 2** Vertical Mount, slide the securing bands onto the Battery Wand prior to snapping into Battery Clips to ensure secure installation.

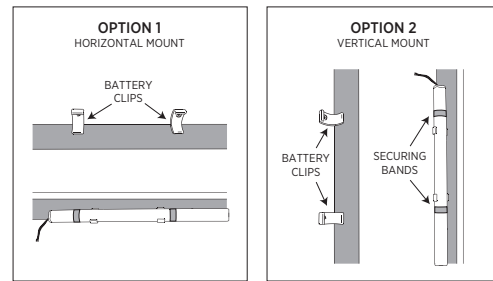

Battery Wand Min. Width is 17"

3B. Installing Your Solar Panel (Optional)

- Identify a part of the window that gets consistent natural light.
- Peel adhesive strips. Apply to the edges of the solar panel.
- Press and hold solar panel to window for 10 seconds until secure.



4. Powering on Your Shade

To Activate Your Battery Motor


- Products will have batteries pre-installed in the wand.
- Connect motor power cable to battery wand.

To Activate Your Solar Panel Motor (Optional)

- Connect power cable to solar panel power and battery wand.

To Activate the Plug-In Motor

- Plug your motor into the wall outlet that will power the shade.

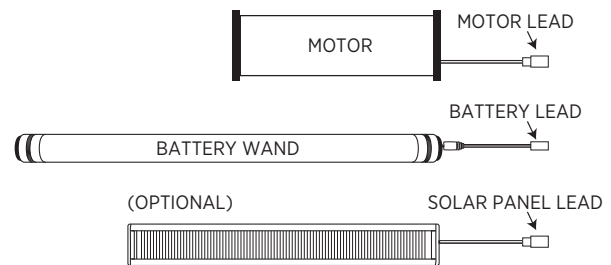

5. Operating Your Shade

- Your shades have been pre-programmed.
- A channel has been assigned to each motor based on your specifications.
- We've also set approximate upper and lower limits.
- For more information, see the Quick Start Guide that came with your shade or visit www.theshadestore.com/motors-help.

Care and Cleaning

Always clean with a low suction, hand held vacuum or dust with a soft, clean cloth or feather duster. If you're dealing with dirt and stains, we suggest using a Mr. Clean® magic eraser to spot treat dirt and stains. This is available online, at local home improvement stores or we can send directly to you via USPS (1-3 days) at no charge.

Warranty

The Shade Store products are covered by a limited lifetime warranty. This warranty covers any defects in materials or workmanship so long as the product is measured and installed according to instructions. Every Shade Store window treatment is designed to provide trouble-free use.