




Option 1: Follow our step-by-step instructions

1. Select Mount Type:

Inside:


- Mounted within the window frame
- Provides a clean built-in look
- Great way to leave attractive woodwork exposed
- $\frac{3}{4}$ " minimum depth required for secure mount*
- If window frame isn't deep enough, please select outside mount

*3" minimum depth required for flush mount

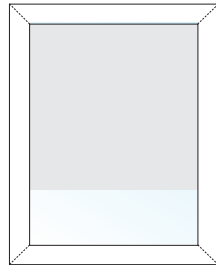

Outside:

- Great option when there is not enough depth for an inside mount
- Mounted to the wall, ceiling or molding surface surrounding the window
- Often used to make the window appear larger or to hide a less attractive window or door
- No minimum depth requirement

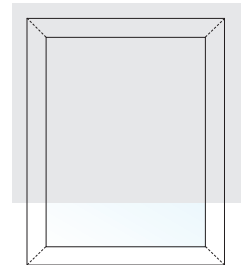


2. Measure:

Inside:

Step 1: Measure the inside width at 3 locations - the top, middle and bottom. Record the smallest of the 3 measurements. This is your ordering width. We will make the necessary deductions (approx. $\frac{1}{4}$ " - $\frac{3}{8}$ "")


Step 2: Measure the height at 3 locations - the left side, middle and right side. Record the largest of the 3 measurements. This is your ordering length.

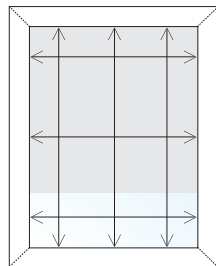

Outside:

Step 1: Measure the width of the area you wish to cover. If space allows we recommend adding 2-3" (1-1 1/2" each side) to this measurement to help eliminate light seepage. This is your ordering width and will be the overall measurement of the shade.

Step 2: Measure the height of the area you wish to cover. This is your ordering length.

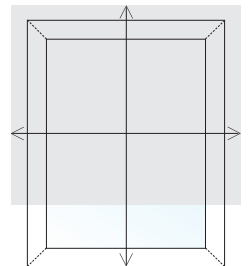

Option 2: View our "how to" video online

Go to: theshadestore.com/measure



Option 3: Hire a professional to measure

We have put together a national network of independent measure + install professionals. Simply go online, visit a showroom, or give us a call - and we can match you to a local pro. Once the professional measures, they'll send us a copy of your measurements, and we'll contact you to put your order together. This same professional can also install your window treatments. It's that simple!

Go to: theshadestore.com/findinstaller

Type in your zip code and get matched today!

Mounting Requirements

PRODUCT	HEADRAIL SIZE	MINIMUM DEPTH REQUIRED FOR SECURE INSIDE MOUNT	MINIMUM DEPTH REQUIRED FOR FLUSH INSIDE MOUNT	MINIMUM SPACE REQUIRED FOR OUTSIDE MOUNT	IM DEDUCTIONS	OM ADDITIONS
without cord lock	2 3/8"	5/8"	2 3/8"	5/8"	-3/8"	n/a
with continuous loop	2 1/4"	7/8"	2 1/4"	1 3/4"	-3/8"	n/a
with top down bottom up	2 3/8"	5/8"	2 3/8"	5/8"	-3/8"	n/a
with cordless system	2 1/4"	7/8"	2 1/4"	1 3/4"	-3/8"	n/a