



## Option 1: Follow our step-by-step instructions

### 1. Select Mount Type:

#### Inside:


- Mounted within the window / door frame / wall-to-wall
- Provides a clean built-in look
- If window frame isn't deep enough, please select outside or ceiling mount

2 1/4" minimum depth required (panel system)  
6" minimum depth required (XL vertical)



#### Outside:

- Great option when there is not enough depth for an inside mount
- Mounted to the wall or molding surface surrounding the window or directly to the ceiling.
- Creates an illusion of extra height to a room
- No minimum depth requirement

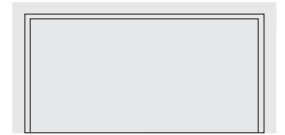


### 2. Measure:

#### Inside:

**Step 1:** Measure the inside width at 3 locations - the top, middle and bottom. Record the smallest of the 3 measurements. This is your ordering width. We will make the necessary deductions (approx. 1/2").

**Step 2:** Measure the height at 3 locations - the left side, middle and right side. Record the smallest of the 3 measurements. We recommend taking 1" off of this measurement to ensure panels are above the floor / sill. This is your ordering length and will be the measurement from the top of the track to the bottom of the panels.

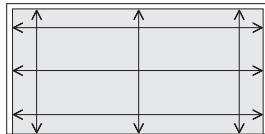


#### Outside:

**Step 1:** Measure the width of the area you wish to cover. This is your ordering width.

**Step 2:** Measure the height of the area you wish to cover. This is your ordering length. Your ordering length will be the measurement from the top of the track to the bottom of the panels.

**\*Please note: We recommend the verticals hang 1" above floor / sill.**

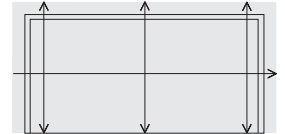

## Option 2: View our "how to" video online

Go to: [theshadestore.com/measure](https://theshadestore.com/measure)



## Option 3: Hire a professional to measure

We have put together a national network of independent measure + install professionals. Simply go online, visit a showroom, or give us a call - and we can match you to a local pro. Once the professional measures, they'll send us a copy of your measurements, and we'll contact you to put your order together. This same professional can also install your window treatments. It's that simple!

Go to: [theshadestore.com/findinstaller](https://theshadestore.com/findinstaller)

Type in your zip code and get matched today!

Mounting Requirements

XL VERTICAL

PRODUCT	RAIL SIZE	MINIMUM DEPTH REQUIRED FOR SECURE INSIDE MOUNT	MINIMUM DEPTH REQUIRED FOR FLUSH INSIDE MOUNT	MINIMUM SPACE REQUIRED FOR OUTSIDE MOUNT	IM DEDUCTIONS	OM ADDITIONS
cord control	1 7/8"	6"	10"	3 1/8"	-1/2"	n/a

Please Note: Each vane is 9 3/4" width and a minimum depth 10" is required for full rotation.

PANEL SYSTEMS

PRODUCT	RAIL SIZE	MINIMUM DEPTH REQUIRED FOR SECURE INSIDE MOUNT	MINIMUM DEPTH REQUIRED FOR FLUSH INSIDE MOUNT	MINIMUM SPACE REQUIRED FOR OUTSIDE MOUNT	IM DEDUCTIONS	OM ADDITIONS
3 channel track	2"	1 1/4"	2"	2"	-3/8"	n/a
4 channel track	2 5/8"	2"	2 3/4"	2"	-3/8"	n/a
5 channel track	3 1/4"	2"	3 3/8"	2"	-3/8"	n/a

Please Note: Widths of 48" - 84" will use a 3 channel track for both one way draw and split draw.  
Widths of 84 1/4" - 120" will use a 4 channel track for one way draw and a 3 channel track for split draw.  
Widths of 120 1/8" - 180" will use a 5 channel track for one way draw and a 4 channel track for split draw.  
Widths of 180 1/8" - 220" will use a 5 channel track for one way draw and a 5 channel track for split draw.