




Option 1: Follow our step-by-step instructions

1. Select Mount Type:

Inside:


- Mounted within the window frame
- Provides a clean built-in look
- Great way to leave attractive woodwork exposed
- Minimum of $\frac{3}{4}$ " depth required for secure mount*
- If window frame isn't deep enough, please select outside mount

* $2\frac{1}{4}$ " minimum depth required for flush mount

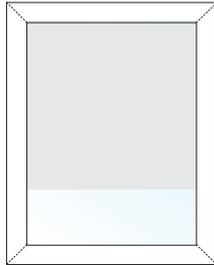

Outside:

- Great option when there is not enough depth for an inside mount
- Mounted to the wall, ceiling or molding surface surrounding the window
- Often used to make the window appear larger or to hide a less attractive window or door

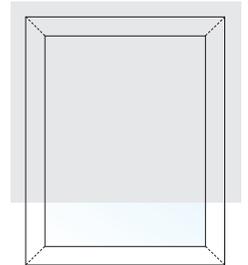


2. Measure:

Inside:

Step 1: Measure the inside width at the top of the window. This is your ordering width. We will make the necessary deductions. (approx. $\frac{1}{8}$ "")

Step 2: Measure the height at 3 locations - the left side, middle and right side. Record the largest of the 3 measurements. This is your ordering length.

Note: Roller / Solar shade fabrics will be approximately $1\frac{3}{8}$ " narrower than your ordering width to allow for brackets. If concerned over resulting light gap, please select outside mount.

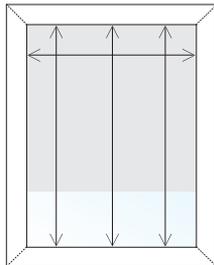


Outside:

Step 1: Measure the width of the area you wish to cover. If space allows we recommend adding 3-4" ($1\frac{1}{2}$ "-2" each side) to this measurement to help eliminate light seepage. This is your ordering width and will be the overall measurement outside bracket to outside bracket

Step 2: Measure the height of the area you wish to cover. This is your ordering length.

Note: Your shade fabric will be $1\frac{1}{4}$ " narrower than the measurement you provide to allow for brackets. If you need the fabric to cover a specific width (i.e. for mounting the shade on a door), add $1\frac{1}{4}$ " to the desired fabric width and this will be your ordering width.

* For shades with upholstered valance, please know the valance will be 1" wider overall due to returns.

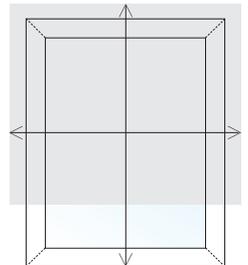

Option 2: View our "how to" video online

Go to: theshadestore.com/measure



Option 3: Hire a professional to measure

We have put together a national network of independent measure + install professionals. Simply go online, visit a showroom, or give us a call - and we can match you to a local pro. Once the professional measures, they'll send us a copy of your measurements, and we'll contact you to put your order together. This same professional can also install your window treatments. It's that simple!

Go to: theshadestore.com/findinstaller
Type in your zip code and get matched today!

Mounting Requirements

PRODUCT	DUSTBOARD SIZE	MINIMUM DEPTH REQUIRED FOR SECURE INSIDE MOUNT	MINIMUM DEPTH REQUIRED FOR FLUSH INSIDE MOUNT**	MINIMUM SPACE REQUIRED FOR OUTSIDE MOUNT	IM DEDUCTIONS (Bracket to Bracket)***	OM ADDITIONS
without valance	n/a	¾"	2¼"	2¼"	-⅛"	n/a
metal or fabric insert valance	n/a	1¼"	2¾"	1¼"	-⅛"	n/a
upholstered valance	IM 2½" OM 3½"	1¼"	3"	3"	-⅜"	+1"
large metal or fabric insert valance*	n/a	1½"	4¼"	2¼"	-⅛"	n/a
large upholstered valance (inside mount)*	3"	1½"	3½"	n/a	-⅜"	n/a

* Large metal / upholstered valances may be required for thicker materials and oversized shades. Please contact customer service for details.

** Add ⅛" - ¼" for heavier / thicker fabrics.

*** Roller / Solar shade fabrics will be approximately 1¼" narrower than your ordering width to allow for brackets. If concerned over resulting light gap please measure for outside mount.