




Option 1: Follow our step-by-step instructions

1. Select Mount Type:

Inside:


- Mounted within the window frame
- Provides a clean built-in look
- Great way to leave attractive woodwork exposed
- $\frac{3}{4}$ " minimum depth required for secure mount*
- If window frame isn't deep enough, please select outside mount

*2 $\frac{7}{8}$ " minimum depth required for flush mount

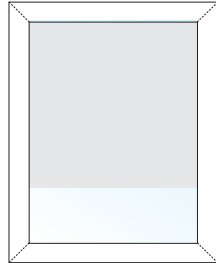

Outside:

- Great option when there is not enough depth for an inside mount
- Mounted to the wall, ceiling or molding surface surrounding the window
- Often used to make the window appear larger or to hide a less attractive window or door

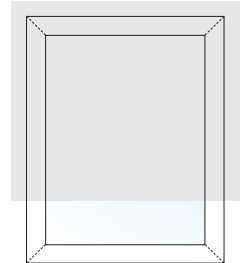


2. Measure:

Inside:

Step 1: Measure the inside width at 3 locations – the top, middle and bottom. Record the smallest of the 3 measurements. This is your ordering width. We will make the necessary deductions (approx. $\frac{1}{2}$ ").


Step 2: Measure the height at 3 locations – the left side, middle and right side. Record the largest of the 3 measurements. This is your ordering length.

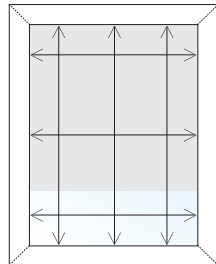

Outside:

Step 1: Measure the width of the area you wish to cover. If space allows we recommend adding 2–3" (1–1 $\frac{1}{2}$ " each side) to this measurement to help eliminate light seepage. This is your ordering width and will be the overall measurement of the blind. (Valance will be approx. 1 \emptyset " wider than blind due to returns.)

Step 2: Measure the height of the area you wish to cover. This is your ordering length.

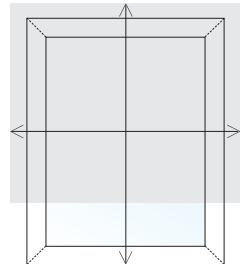

Option 2: View our “how to” video online

Go to: theshadestore.com/measure



Option 3: Hire a professional to measure

We have put together a national network of independent measure + install professionals. Simply go online, visit a showroom, or give us a call – and we can match you to a local pro. Once the professional measures, they'll send us a copy of your measurements, and we'll contact you to put your order together. This same professional can also install your window treatments. It's that simple!

Go to: theshadestore.com/findinstaller

Type in your zip code and get matched today!

Mounting Requirements

PRODUCT	HEADRAIL SIZE	MINIMUM DEPTH REQUIRED FOR SECURE INSIDE MOUNT	MINIMUM DEPTH REQUIRED FOR FLUSH INSIDE MOUNT*	MINIMUM SPACE REQUIRED FOR OUTSIDE MOUNT	IM DEDUCTIONS		OM ADDITIONS	
cord tilt + wand tilt	2 $\frac{1}{2}$ "	$\frac{3}{4}$ "	3"	1 $\frac{3}{4}$ "	- $\frac{1}{8}$ " headrail	- $\frac{1}{2}$ " slats	+ $\frac{3}{8}$ " headrail	+1" valance

* Includes standard wood valance