




HOW TO MEASURE:

IT ALL STARTS WITH THE MOUNT TYPE

How do you want to hang your Woven Wood Shade? Inside the window frame? Outside the window frame? There are benefits to each and some important differentiators to learn.

OPTION 1: FOLLOW OUR STEP-BY-STEP INSTRUCTIONS

INSIDE MOUNT

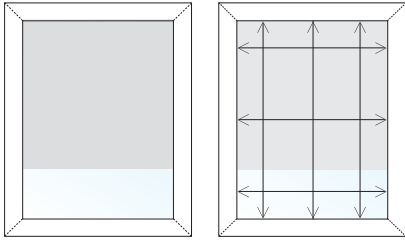

- Mounted inside your window's frame
- Provides a clean, built-in look
- Leaves attractive woodwork exposed
- There is a $\frac{3}{4}$ " minimum amount of space needed for this mount type. We call this measurement the minimum depth requirement.


STEP 1

Because not all windows are perfect rectangles, we recommend measuring the window in 3 places to get your width: across the top, middle and bottom (see diagram above). Round all measurements to nearest $\frac{1}{8}$ ". Take smallest number. This is your ordering width. We will make the necessary deductions (approx. $\frac{3}{8}$ " - $\frac{1}{2}$ ")

STEP 2

Finding the length is a similar process, measuring the length of the window in 3 places on the window: left, center and right. Round all measurements to nearest $\frac{1}{8}$ ". Take largest number. This is your ordering length.

OUTSIDE MOUNT

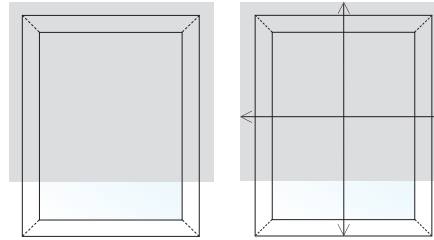

- Mounted outside or on top of the window's frame
- Provides a taller, more dramatic appearance
- There is no minimum depth requirement
- Shade comes with L-Brackets for wall or casing mount

STEP 1

Measure the width of the area you wish to cover. If space allows we recommend adding 2-3" (1 - $\frac{1}{2}$ " each side) to this measurement to help eliminate light seepage. This is your ordering width and will be the overall measurement of the shade.

STEP 2

Measure the height of the area you wish to cover. This is your ordering length.

Workroom Note:

- For outside mount shades with upholstered valances, please note the valance will be 1" wider than your ordered width due to returns.

OPTION 2: VIEW OUR "HOW TO" VIDEO ONLINE

GO TO: theshadestore.com/measure

OPTION 3: HIRE A PROFESSIONAL TO MEASURE

We have put together a national network of independent measure & install professionals. Simply go online, visit a showroom, or give us a call - and we can match you to a local pro. Once the professional measures, they'll send us a copy of your measurements, and we'll contact you to put your order together. This same professional can also install your window treatments. It's that simple!

GO TO: theshadestore.com/findinstaller
Type in zip code and get matched today!



HOW TO MEASURE CONTINUED:

NATURALS DEPTH REQUIREMENTS

OPTIONS	HEADRAIL SIZES	Minimum Depth Required For Secure INSIDE MOUNT	Minimum Depth Required For Flush INSIDE MOUNT	Minimum Height Required For OUTSIDE MOUNT
Cord Lock	1 3/4"	3/4"	1 7/8"	2 1/2"
Cord Lock w/ Minimized Headrail	3/4"	3/4"	7/8"	2"
Continuous Loop	2 1/4"	1 1/4"	2 3/8"	3"
Continuous Loop w/ Minimized Headrail	1 3/4"	3/4"	1 7/8"	2 1/2"
Cord Lock w/ Upholstered Valance	1 3/4"	1 1/4"	2 1/4"	2 1/2"
Continuous Loop w/ Upholstered Valance	2 1/4"	1 1/4"	2 3/4"	3"
TDBU*	1 3/4"	1 1/4"	2 1/4"	2 1/2"
Cordless*	2 1/2"	1 1/4"	2 5/8"	3"
Cordless w/ Upholstered Valance	2 1/2"	1 1/4"	3"	3"
Multiple on 1 w/Cord Lock	1 3/4"	1 1/4"	2 1/4"	2 1/2"
Multiple on 1 w/ Continuous Loop	2 1/4"	1 1/4"	2 3/4"	3"
Standard Style w/ Cord Lock	2 1/2"	1 1/4"	3"	3"
Standard Style w/ Continuous Loop	2 1/2"	1 1/4"	3"	3"
Motorized - TSS & Somfy**	3"	1 3/4"	3 1/8"	3 3/4"
Motorized - TSS & Somfy w/ Upholstered Valance**	3"	1 3/4"	3 1/8"	3 3/4"

Workroom Notes:

- 3/4" minimized headrail can be requested for Cord Lock with Upholstered Valance and 2-on-1.
- 1 3/4" is smallest headrail available on TDBU and Standard Style. 3/4" CANNOT be requested with these options.
- **Motorized Headrails cannot be customized smaller than standard sizes.



HOW TO MEASURE CONTINUED:

BAMBOO & GRASS DEPTH REQUIREMENTS

OPTIONS	HEADRAIL SIZES	Minimum Depth Required For Secure INSIDE MOUNT	Minimum Depth Required For Flush INSIDE MOUNT	Minimum Height Required For OUTSIDE MOUNT
Cord Lock	1 1/2"	3/4"	1 3/4"	1 5/8"
Cord Lock w/ minimized Headrail	3/4"	3/4"	1"	1 5/8"
Continuous Loop	2 1/2"	1 1/4"	2 3/4"	1 5/8"
Continuous Loop w/ minimized Headrail	1 1/2"	3/4"	1 3/4"	1 5/8"
TDBU*	1 1/2"	3/4"	1 3/4"	1 5/8"
Cordless*	2 1/2"	1 1/4"	2 3/4"	1 5/8"
Cordless w/ Standard Style Roman	2 1/2"	1 1/4"	3"	1 5/8"
Multiple on 1 w/ Cord Lock	1 1/2"	3/4"	2"	1 5/8"
Multiple on 1 w/ Continuous Loop	2 1/2"	1 1/4"	3"	1 5/8"
Motorized - TSS & Somfy**	2 3/4"	1 1/2"	3"	1 5/8"
Motorized - TSS & Somfy w/ Standard Style Roman**	2 3/4"	1 1/2"	3 1/4"	1 5/8"

Workroom Notes:

- *1 1/2" is smallest headrail available on TDBU and Standard Style. 3/4" CANNOT be requested with these options.
- **Motorized Headrails cannot be customized smaller than standard sizes.